

Thank you for purchasing this Croydex product. Please follow these care instructions to ensure your lightpull retains its high quality finish - **and retain this leaflet for future reference.**

WARNING

Always ensure that the mains power to the pull switch is turned off before removing the pull switch cover to replace the cord of a light pull.

If in doubt please consult a qualified electrician.

Fixing Instructions for Lightpulls which consist of two separate pieces :

1. Unscrew the bottom section of the light pull. Push the cord through the top piece of the light pull, out of the bottom and tie a knot in the end. Pull the cord from the top of the light pull until the knot is held securely inside. Screw the two sections of the light pull back together

Fixing Instructions for Lightpulls which consist of one single piece :

1. Insert the cord through the small hole at the top of the light pull. Push the cord all the way through the light pull, out of the bottom and tie a double knot in the end. Pull the cord from the top of the light pull until the knot is held securely inside.

Please note that a swinging light pull may cause damage to any nearby surfaces.

Product Care

To retain the best quality finish, clean product regularly with a soft cloth and mild detergents. Do not use abrasive or chemical cleaners as these will damage the product.

Croydex Limited, Central Way, Andover, Hants, SP10 5AW, UK
Tel: +44 (0) 1264 365881. Fax: +44 (0) 1264 356437
Website: www.croydex.co.uk. E-mail: info@croydex.co.uk