

HOMEBASE

8FT INFLATABLE SANTA NORTH POLE SIGN



INSTRUCTION MANUAL

Important! Please read these instructions before using the product. Retain instructions for future use.

HHGL Limited, MK9 1BA, HHGL (ROI) Limited, D02 X576

Product Specification	
Overall Dimensions	H240 x W165 x D70cm
Overall Wire Length	5m
Transformer	IP44, Output 12V DC Max 12W
Light	4 x LED

Contents

- 1 x 8ft inflatable Santa
- 1 x power transformer
- 6 x stakes
- 3 x 1.8m ropes

Operating instructions

1. Unpack the inflatable and transformer from the box.
2. Ensure the zip on the base of the inflatable is fully closed.
3. Unwind the lead-in cable cord from the transformer and ensure the weatherproof cap is tightened onto the transformer.
4. Choose where you want to locate the inflatable.
If it is placed outdoors, it is recommended to secure the inflatable as detailed in point 5, to provide stability in windy conditions.
5. To secure, use the stakes provided and insert them through the nylon hooks attached at the bottom of the inflatable. For the nylon hooks attached to the inflatable body, use the provided ropes and secure them to the stakes firmly. The recommended angle for the ropes is 30° - 45° from the top, as this provides a stable condition for the inflatable.
6. If additional stability is required, sandbags (not supplied) can be placed into the zipper compartment on the base of the inflatable.
7. Plug the transformer supplied with this kit into a mains socket outlet and turn the main switch ON.
8. The inflatable will inflate to the correct size in a few minutes. If it is not inflating, it is possible that the passage from the fan to the inflatable is obstructed.
Turn the adapter off and adjust if required.

Note: Do not put your hands over the fan whilst it is inflating. Do not attempt to put any small objects through the fan grille. Keep out of reach of children, as this product is not a toy.

Maintenance and cleaning

- Only use mild detergent with cold water to wipe.
- Leave it inflated until it is completely dry.
- To store the inflatable away, make sure to unplug, roll up and store in the original packaging.
- Do not attempt to wipe the motor.

Repair

- If the festive figure is not staying inflated even when the fan is working at full power, it is likely that there is a hole or tear in the inflatable.
- Locate the source of the puncture, turn the festive figure ON and examine the holes or tear.
- Small holes can be patched up with tape. A thick clear packaging tape will work, as well as duct tape (not supplied with this kit).

- If the tape is not strong enough or holes are especially large, use a nylon patch. These patches can be obtained from your local arts and crafts stores.
- Once the hole has been sealed, re-inflate the festive figure and check.






Warning

Please read through the instructions and warnings before use. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- Always place the plug into an INDOOR mains socket or into a weatherproof outdoor socket.
- Always unwind the cord fully before use.
- Use the included transformer only. An incorrect transformer can damage the fan and LED inside.
- This product is intended as a Christmas decoration only, it is not to be used by children as a toy and is not intended for household illumination.
- Do not connect the product to the power supply while the product is in the packaging.
- Retain the packaging for storing the unit when not in use and keep this information for future reference.
- Unplug when not in use. Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this light chain cannot be replaced; if the cord is damaged, the light set must be destroyed.
- If you use an extension cord, use one the right length for the purpose. Do not chain several extension cords. Do not attempt to modify the wiring or 'cut to length'.
- Keep out of the reach of children.
- Small parts could cause a choking hazard.
- Keep away from naked flames.
- Do not place over or near sources of heat.
- Keep packaging for future reference.

Disposal & recycling

Electrical products are labelled with the wheellie bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

 Recycle	<p>The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.</p>	 transformer
 UK CA CE 	<p>Dispose of the product in an environmentally friendly manner when you decide to part with it. This device should not be disposed of with household waste. Dispose of it at a recycling centre, check with your local authority or store for recycling advice. Please note that all products with this symbol must be recycled.</p>	 light set IP44