

HOMEBASE

CHRISTMAS TREE & TRAIN MOVING MUSICAL LED DECORATION



INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Product specification

- Rated input: IP20 4.5V DC 1.35W
- Bulb rating: 3V 0.03W
- Product dimensions: H40.5 x Dia.22cm
- Transformer: JT-DC4.5V1.35W-E3

Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For INDOOR use only.
- For use as a decoration, not a toy.
- Do not connect the product to the power supply whilst the product is still in the packaging.
- Unplug when not in use. Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The lights are constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the bulbs.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Keep away from sources of heat and naked flames.
- Unplug when not in use.
- Use only with the supplied power transformer.
- Do not switch on whilst the product is still in the packaging.
- Requires 3 x 1.5V AA batteries (not included).
- WARNING: Batteries should only be replaced by an adult.
- Batteries are to be inserted with the correct polarity.
- Do not mix old and new batteries.
- Do not mix different types of batteries, only batteries of the same or equivalent type are recommended.
- Turn 'OFF' when not in use.
- Remove the batteries during long periods of non-usage.
- Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak. Use collection points where available.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Remove batteries before storing.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.

Operating instructions

1. There are 2 options of power source for this product, mains power and batteries (3 x 1.5V AA, not included). The battery power will be cut off automatically when inserting the DC plug into the DC socket of the product.
2. Unpack the product from the box.
3. Operating steps with battery power:
 - Open the battery compartment at the base of the product.
 - Place the required batteries in the compartment; please ensure the battery polarity is connected correctly.
 - Close the battery compartment and secure.
 - Switch the power switch to your desired mode: ON 1 will operate lights, motion and play music; ON 2 will operate lights and motion without music.
4. Operating steps with mains power:
 - Connect the power transformer to the products DC socket, then plug the transformer into the mains socket.
 - Switch the power switch to your desired mode: ON 1 will operate lights, motion and play music; ON 2 will operate lights and motion without music.
5. Switch it OFF when not in use.

Disposal and recycling



Electrical products are labelled with the wheelie bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.