

HOMEBASE

BERRY HANGING BASKET



INSTRUCTION MANUAL

Important! Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA, HHGL (ROI) Limited, D02 X576


Caution

- This basket is intended for indoor or outdoor use.
- Do not switch on whilst the product is still in the packaging.
- Requires 3 x 1.5V AA batteries (not included).
- **WARNING:** batteries should only be replaced by an adult.
- Batteries are to be inserted with the correct polarity.
- Do not mix old and new batteries.
- Do not mix different types of batteries, only batteries of the same or equivalent type are recommended.
- Turn 'OFF' when not in use.
- Remove the batteries during long periods of non-usage.
- Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak. Use collection points where available.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Keep away from sources of heat and naked flames.
- Remove batteries before storing.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.
- This product is intended for Christmas decoration only and is not suitable for household room illumination.
- **WARNING:** Do not use the product for anything other than its intended use.
- Do not position or place the tree near fire, candles or any other direct sources of heat. Avoid using in damp, wet and humid areas.
- Product is fire retardant. Do not allow the product in direct contact with/near a source of heat or flames, e.g. gas or electric heaters, fireplaces, candles or other similar heat sources.
- Do not cover the product with cloth, paper or any other materials when in use, e.g. curtains, nets or bedding.
- The light set is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light set.
- This product is not a toy, it's made from small fibres which may detach and pose a choking hazard. Keep out of reach of children and pets.
- Please do not leave children unattended near the basket.
- Ensure the basket is stable; Please do not overload with excessively heavy decorations.
- To avoid the risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Please read fully before use and retain for future use.

Before you start

1. Please check that all parts are present before you start the assembly of your product, as once assembled, this product is exempt from our money back guarantee. This does not affect your statutory rights.
2. We recommend that, where possible, all items are assembled near to the flat area in which they will be placed in use, to avoid moving the product unnecessarily, once assembled. Never allow any parts of the basket to come into contact with a source of heat or flames.
3. Please keep plastic bags out of reach of children and animals.

Assembled dimensions

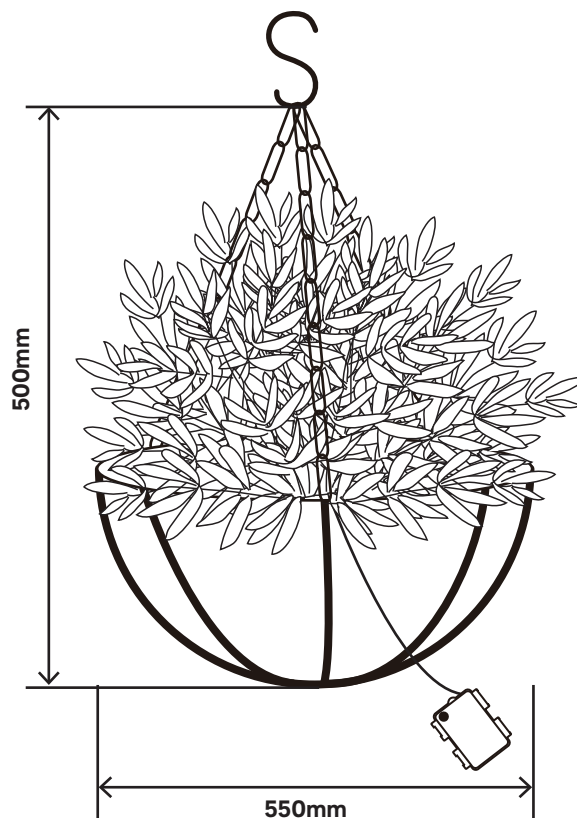


Assembly

Step 1



Unbox the contents in your desired location. Take out the basket. The light chains are pre-decorated on the product.

Step 2

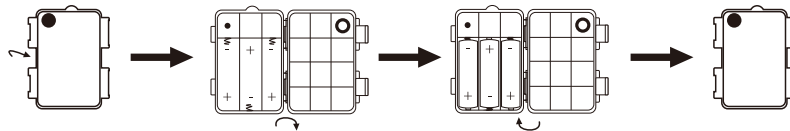

Open the battery box, insert 3 x 1.5V AA batteries with correct polarity (+/-), then close the battery box.

Operating instructions

Press the button to turn on the lights. This triggers a pre-programmed timing sequence of 6 hours on, 18 hours off, over a 24 hour period.

Care and use

Before using or re-using the basket, inspect the product carefully. If there are any damaged parts or exposed sharp points, please dispose of the basket.

Disassembly and storage

Before storage, please repack the product as follows, to avoid damage:

- Remove the batteries from the battery compartment to avoid leakage and corrosion.
- Carefully place the basket in its box and tape it shut. STORE THE PRODUCT IN A COOL AND DRY LOCATION, AWAY FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40 °C.

Disposal and recycling



Electrical products are labelled with the wheelie bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.