



HOMEBASE

9 LITRE EVAPORATIVE AIR COOLER

INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.

HHGL Limited, MK9 1BA
HHGL (ROI) Limited, D02 X576

SAFETY WARNINGS



Read this information carefully before installation or use of this product. Keep this manual with the product for future reference.

1. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and maintenance shall not be undertaken by children without supervision.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Switch off the power and remove the plug when the appliance is not in use.
6. Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
7. Do not use outdoors.
8. Do not use any appliance for anything other than its intended use. This product is intended for household use only.
9. This appliance is intended to be plugged in a standard domestic power socket only.
10. Do not misuse the power cord. Never carry the appliance by the power cord or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.
11. Do not attempt to repair, disassemble or modify the appliance yourself. There are no user-serviceable parts.
12. Arrange the power cord away from traffic areas so it will not be tripped over.
13. Do not insert or allow foreign objects to enter the grille openings, as this may cause damage to the appliance and/or injury to the user.
14. Ensure that the fan is switched off from the mains supply before removing the guard.

15. Do not insert your fingers in the opening of the guard.
16. Never use the fan without guard. Do not use the fan if the fan blade is damaged or cracked.
17. Do not leave hair, tissue, tablecloths, clothes or curtains near any opening on the fan, they could be sucked into the fan and taken within the internal moving parts, which could cause injury or damage.
18. Do not use the fan in wet or damp locations such as bathrooms.
19. Keeping the fan away from pets.
20. Check the voltage indicated on the rating plate. This product is designed for a 220-240V~ 50-60Hz electric supply. Periodically check the power cord of this fan.
21. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Place the fan on a flat, firm, steady surface before use.
23. Do not use this fan near a window or in direct sunlight.
24. Do not try to disassemble this fan; there are no parts which can be repaired by the user. If you need maintenance, please contact your local store.

TECHNICAL SPECIFICATION

MODEL	TX-AC03
ARTICLE NO.	586548
WATTAGE	60W
WEIGHT	5.5KG
VOLTAGE	220-240V~
FREQUENCY	50Hz

TECHINICAL INFORMATION

Information to identify the model(s) to which the information relates to :			
Description	Symbol	Value	Unit
Maximum fan flow rate	F	14,71	m ³ /min
Fan power input	P	52,10	W
Service value	S _v	0,28	(m ³ /min)/W
Standby power consumption	P _{SB}	0,48	W
Off power consumption	P _{OFF}	—	W
Fan sound power level	L _{WA}	61,71	dB(A)
Maximum air velocity	C	2,61	meters/sec
Seasonal electricity consumption	Q	17,21	kWh/a
Measurement standard for service value	EN IEC 60879:2019		

ICON EXPLANATION



This appliance conforms to relevant directives of The European Community.



The product complies with the applicable UK directives.

 


Class II appliance.



This marking indicates that this product should not be disposed with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used appliance, please use the return and collection systems or contact the store where the appliance was purchased. They can take this product for environmentally safe recycling.

PRODUCT STRUCTURE

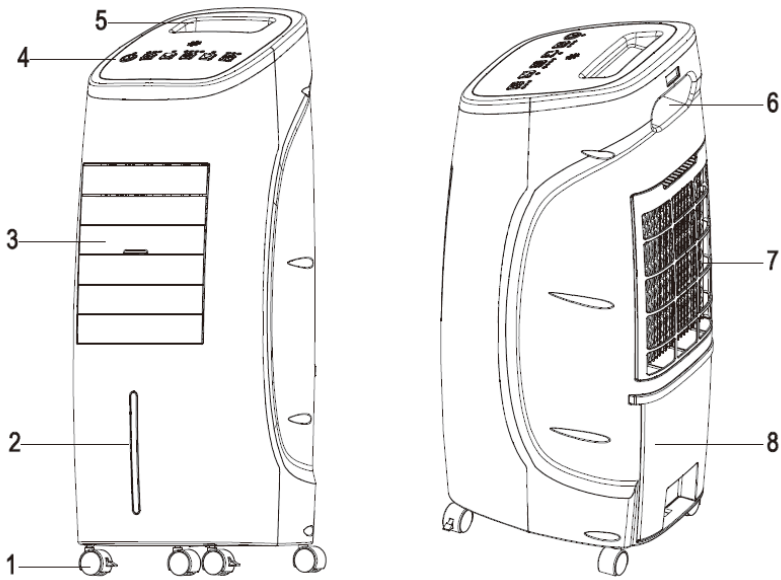

- 1 - Castors
- 2 - Water level indicator
- 3 - Air outlet
- 4 - Control panel
- 5 - Remote control warehouse
- 6 - Handle
- 7 - Filter
- 8 - Water tank

ACCESSORIES

 


Ice packs x 2



Remote control (2 x AAA batteries - not included)

CONTROL PANEL

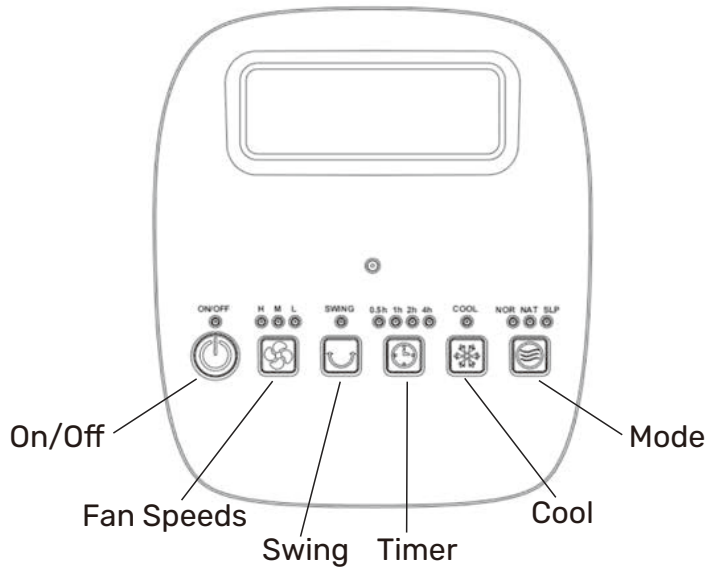



BEFORE OPERATION

⚠ WARNING! The appliance must be switched off and unplugged before filling with water.


HOW TO USE THE ICE PACKS

- Before using, add water to the ice pack do not fill more than the maximum, put it into the freezer until frozen.
- Attention: The ice pack should be kept away from children and pets.
- **WARNING!** Ice crystals can not be consumed.

  WATER FILLING

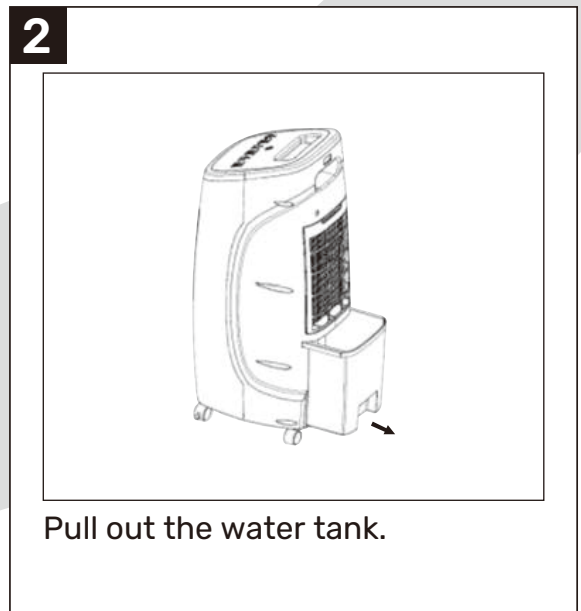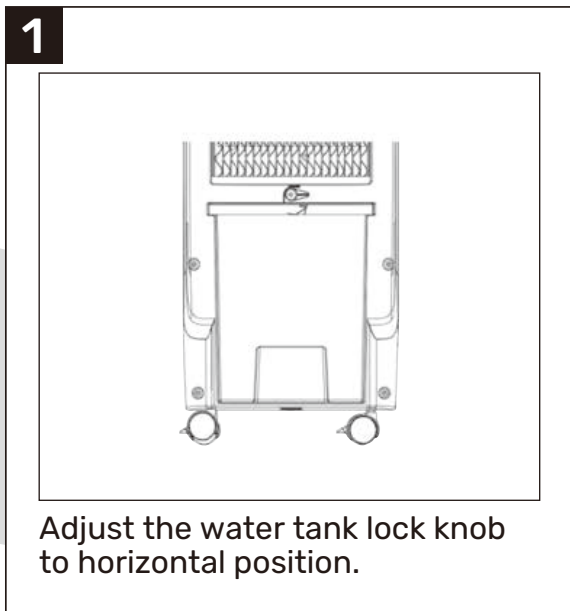


3

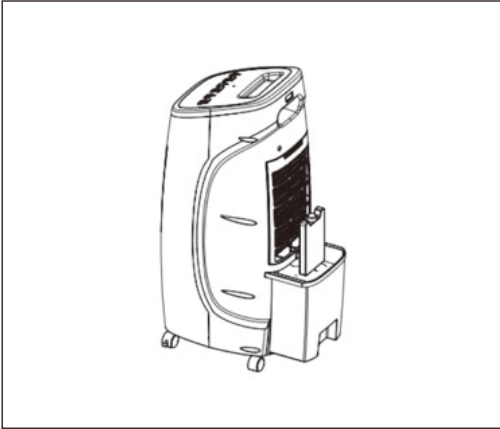 

Put the frozen ice pack into the water tank.

 4

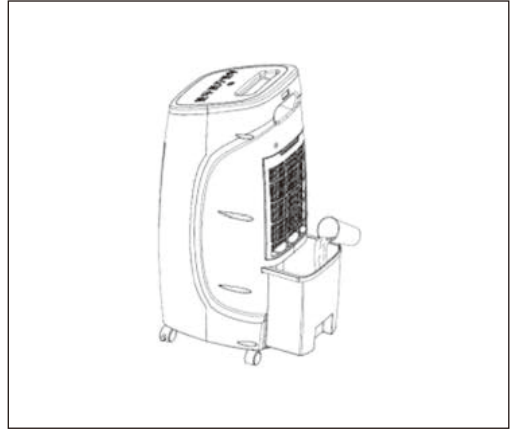


Fill the water tank with cold water. Ensure the water level is between Min. and Max.

5




Push back the water tank gently into the machine.

 6

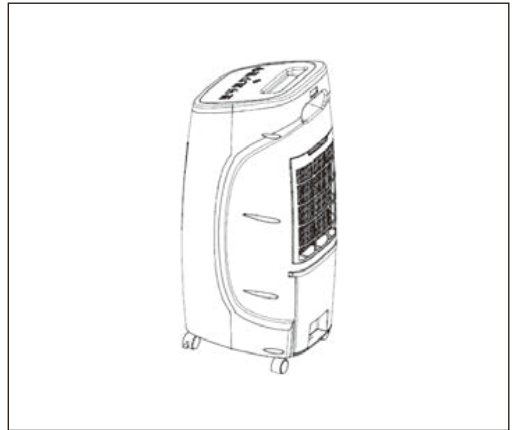


7

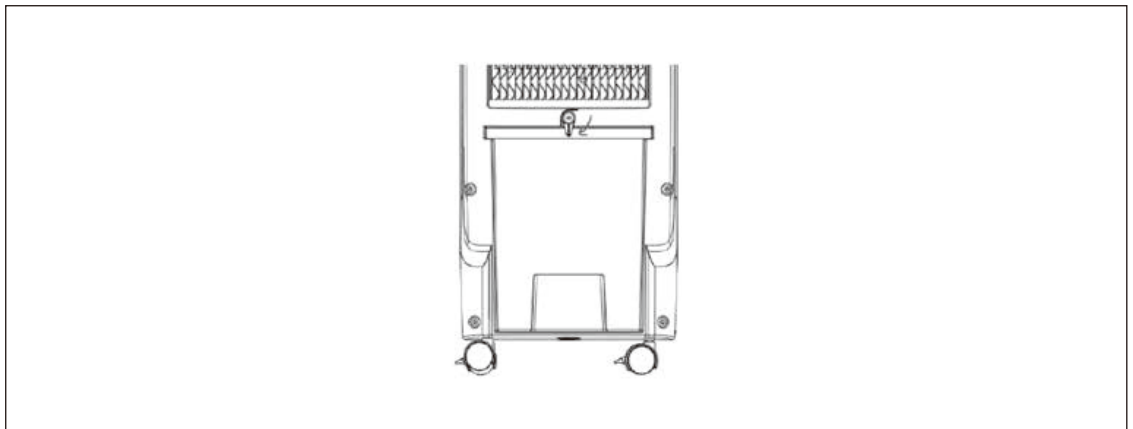 



Adjust the water tank lock knob to the vertical position to lock the water tank. Connect the unit to the power supply. The appliance is now ready to be used.


OPERATION




ON/OFF: Press  button to switch the air cooler on and off.


FAN SPEED: Press  button to adjust the fan speed at L-LOW / M-Medium / H-High position, the relevant LED indicator light will be on.

SWING: Press  button one time to control the swing function. Press a second time to cancel the swing function.

TIMER: Press  button to adjust the timer, you can set the timer from 0.5 to 7.5 hours. Each time you press the button, time increases by 0.5 hours until 7.5 hours. Press one more time again to cancel the timer.

COOL: Press  button to control the water humidifier cooling function. The water pump inside the unit begins to operate to humidify the honeycomb filter and freshen the air. If water is low, the water pump will stop working immediately to protect the machine.

Note: After usage, switch off the appliance and unplug it from the mains socket. Please wait for the motor to stop, then remove the water tank.

MODE: Press  button to select desired mode: normal, natural or sleep. The corresponding indicator light will be on to show which mode you have chosen.

NORMAL MODE

You can set the fan speed Low / Medium / High.

NATURAL MODE

 
The device can give you a feeling of a natural breeze in NATURAL mode. The fan speed can be set Low / Medium / High.

- Low speed: Provides a light natural breeze.
- Medium speed: Provides a medium natural breeze.
- High speed: Provides a strong natural breeze.

SLEEP MODE

During sleep mode, it can give you a gentle breeze and low noise.

- Low speed: Provides a light natural breeze.
- Medium speed: Provides a medium natural breeze for 30 minutes, then continues to provide a light natural breeze.
- High speed: Provides a strong natural breeze for 30 minutes, a medium natural breeze for 30 minutes, then continues to provide a light natural breeze.

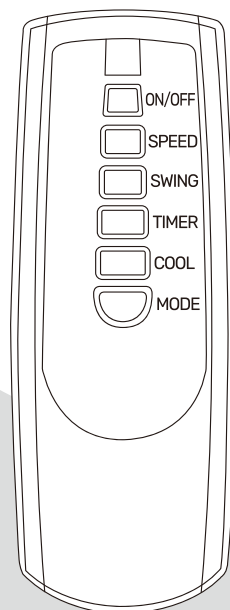

CLEANING AND MAINTENANCE

Dust may accumulate on the air outlet, which would affect the fans performance.

Therefore, it's recommended to clean the fan at least once a month.

1. Turn off and unplug the fan.
Attention: make sure to unplug the power cord when cleaning the fan, otherwise it might cause electric shock or damage the machine.
2. Unplug the unit and wait until the fan stops before cleaning.
3. Use a normal detergent and soft brush instead of corrosive or solvent detergent when cleaning the machine.

 
SURFACE CLEANING

1. Use a damp cloth to clean the surface of the fan. Do not spray water directly on to the machine.
2. After cleaning, make sure the machine and the other parts dry completely before connecting to the power supply.

MAINTENANCE

1. If the fan will not be used for a long time, unplug the power cord and pack the product away to avoid dust accumulating on the fan body.
2. Ensure the product is well packed then store it in a dry, well-ventilated place until it will be used again.

PLUG REPLACEMENT

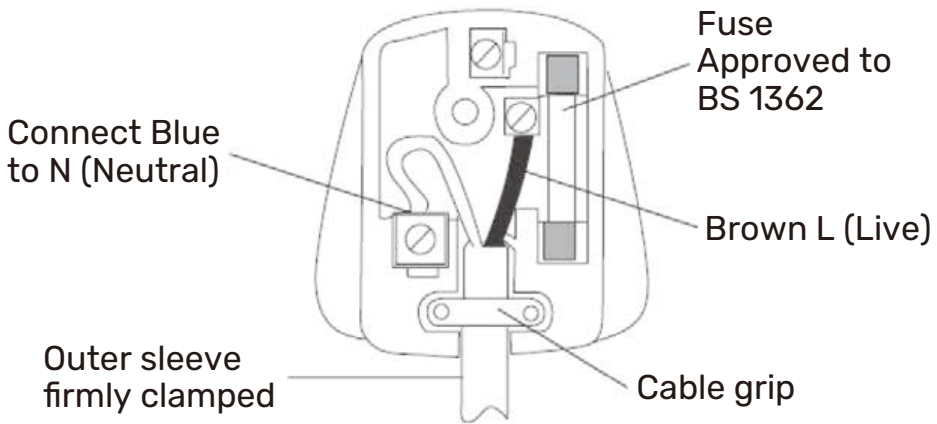

If you need to replace the fitted plug, then follow the instructions below.

⚠ WARNING! The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

As the colour of the wire in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked N or coloured black.

The brown wire must be connected to the terminal marked L or coloured red.

⚠ WARNING! Never connect live or neutral wires to the earth terminal of the plug.

Only fit an approved BS 1363 or BS 1363/A plug and correctly rated BS 1362 3 Amp fuse. If in doubt, consult a qualified electrician.

NOTE: If a moulded plug is fitted and has to be removed, take great care in disposing of the plug and severed cable; it must be destroyed to prevent it being accidentally plugged into a power socket.

WARRANTY

This product is covered by a 2 year warranty.

The warranty covers any manufacturing defect in materials, workmanship and finish.

Any claim under this warranty must be made by going to your nearest Homebase store, taking your proof of purchase with you, and claims must be made within 2 years of the date of purchase.

We will offer you a free repair of the item where this is possible, or a replacement or a refund. Your statutory rights remain unaffected, in particular, any rights you may have under the Consumer Rights Act 2015.

This warranty is given by:
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576.

Please note: This warranty does not apply to products misused or neglected and only covers domestic use. It does not apply to commercial use of the product.