

Size: 210 x 292 mm

HOMEBASE

FALLING SNOWFLAKE LED PROJECTOR



INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Size: 210 x 292 mm

Product specification

- Rated input: 15V DC Max. 6W
- Bulb rating: 3V 1.5W
- Transformer: AED09-150GQABIP44

Contents

- 1 x projector
- 1 x transformer
- 1 x stake
- 1 x stand tube
- 1 x connector

Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind the cord before use. Do not connect the product to the power supply whilst the product is still in the packaging.
- This light is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light.
- This product is intended for occasional decoration only; Not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this projector cannot be replaced; if the cord is damaged, the projector must be destroyed.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.

Operating instructions

1. Unpack the product and accessories from the packaging.
2. Assemble the stake and stand tube with the connector.
3. Insert the stake in the selected ground location.
4. Connect the cord into the supplied adaptor, then plug the adaptor into a mains socket.
5. Adjust the lamp up or down to get the projection in your desired location.
6. Unplug the transformer when not in use.

Disposal and recycling



Electrical products are labelled with the wheeled bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

Size: 210 x 292 mm

HOMEBASE

ROTATING SANTA IN SLEIGH LED PROJECTOR



INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Size: 210 x 292 mm

Product specification

- Rated input: 6V DC Max. 6W
- Bulb rating: 3V 3W
- Transformer: AED09-060GPABIP44

Contents

- 1 x projector
- 1 x transformer
- 1 x stake
- 1 x stand tube
- 1 x connector

Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind the cord before use. Do not connect the product to the power supply whilst the product is still in the packaging.
- This light is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light.
- This product is intended for occasional decoration only; Not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this projector cannot be replaced; if the cord is damaged, the projector must be destroyed.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.

Operating instructions

1. Unpack the product and accessories from the packaging.
2. Assemble the stake and stand tube with the connector.
3. Insert the stake in the selected ground location.
4. Connect the cord into the supplied adaptor, then plug the adaptor into a mains socket.
5. Adjust the lamp up or down to get the projection in your desired location.
6. Unplug the transformer when not in use.

Disposal and recycling



Electrical products are labelled with the wheeled bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

Size: 210 x 292 mm

HOMEBASE

FALLING SNOW LED PROJECTOR



INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Size: 210 x 292 mm

Product specification

- Rated input: 12V DC Max. 6W
- Bulb rating: 3V 3W
- Transformer: AED09-120GQABIP44

Contents

- 1 x projector
- 1 x transformer
- 1 x stake
- 1 x stand tube
- 1 x connector

Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind the cord before use. Do not connect the product to the power supply whilst the product is still in the packaging.
- This light is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light.
- This product is intended for occasional decoration only; Not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this projector cannot be replaced; if the cord is damaged, the projector must be destroyed.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.

Operating instructions

1. Unpack the product and accessories from the packaging.
2. Assemble the stake and stand tube with the connector.
3. Insert the stake in the selected ground location.
4. Connect the cord into the supplied adaptor, then plug the adaptor into a mains socket.
5. Adjust the lamp up or down to get the projection in your desired location.
6. Unplug the transformer when not in use.

Disposal and recycling




Electrical products are labelled with the wheeler bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

Size: 210 x 292 mm

HOMEBASE

10 STAR PROJECTOR STRING LIGHT INTERCONNECTABLE

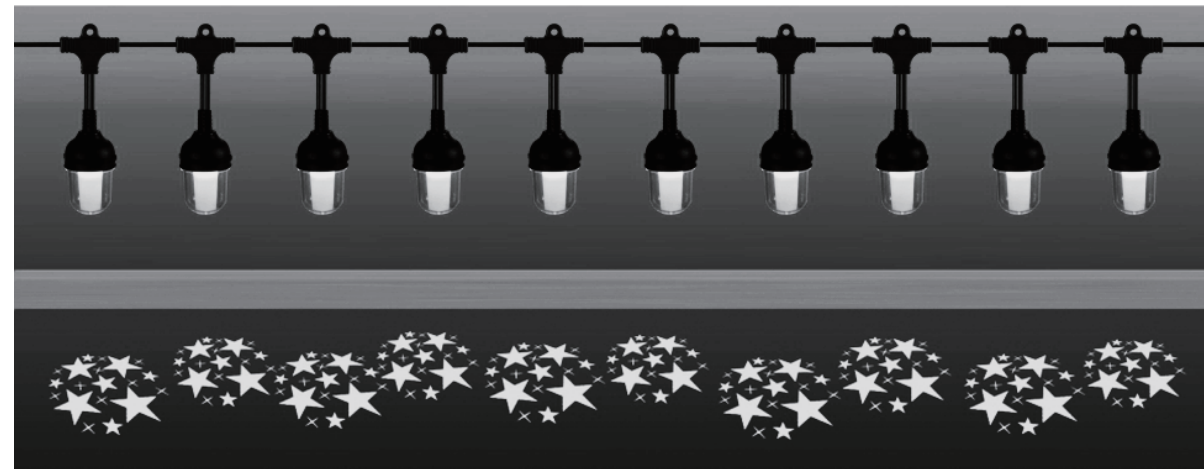

INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Size: 210 x 292 mm

Product specification

- Rated input: 5V DC Max. 6W
- Bulb rating: 3V 0.5W
- Transformer : AED09-050GQABIP44

Contents

- 1 x projector
- 1 x transformer

Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind the cord before use. Do not connect the product to the power supply whilst the product is still in the packaging.
- This light is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light.
- This product is intended for occasional decoration only; not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Only same model of this light set can be connected for interconnection, never connect more than 2 light sets as a total length.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this light chain cannot be replaced; if the cord is damaged, the light set must be destroyed.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.

Operating instructions

1. Unpack the product from the packaging.
2. Choose a location for hanging the light set, please ensure you secure the light set.
3. Connect the transformer to the light set.
4. Plug the power transformer into a mains socket.
5. Unplug the transformer when not in use.

Disposal and recycling



Electrical products are labelled with the wheelie bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.