



HOMEBASE

16"
PEDESTAL FAN

INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.

HHGL Limited, MK9 1BA
HHGL (ROI) Limited, D02 X576

SAFETY WARNINGS



Read this information carefully before installation or use of this product. Keep this manual with the product for future reference.

1. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
2. Children should not play with the appliance.
3. Cleaning and maintenance should not be undertaken by children without supervision.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Switch off the power and remove the plug when the appliance is not in use.
6. Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
7. Do not use outdoors.
8. Do not use any appliance for anything other than its intended use. This product is intended for household use only.
9. This appliance is intended to be plugged in a standard domestic power socket only.
10. Do not misuse the power cord. Never carry the appliance by the power cord or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.
11. Do not attempt to repair, disassemble or modify the appliance yourself. There are no user-serviceable parts.
12. Arrange the power cord away from traffic areas so it will not be tripped over.
13. Do not insert or allow foreign objects to enter the grille openings, as this may cause damage to the appliance and/or injury to the user.
14. Ensure that the fan is switched off from the mains supply before removing the guard.

15. Do not insert your fingers in the opening of the guard.
16. Never use the fan without the guard. Do not use the fan if the fan blade is damaged or cracked.
17. Do not leave hair, tissue, tablecloths, clothes or curtains near any opening on the fan, they could be sucked into the fan and taken within the internal moving parts, which could cause injury or damage.
18. Do not use the fan in wet or damp locations such as bathrooms.
19. Keep the fan away from pets.
20. Check the voltage indicated on the rating plate. This product is designed for a 220-240V~ 50-60Hz electric supply. Periodically check the power cord of this fan.
21. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Place the fan on a flat, firm, steady surface before use.
23. Do not use this fan near a window or in direct sunlight.
24. Do not try to disassemble this fan; there are no parts which can be repaired by the user. If you need maintenance, please contact your local store.

TECHNICAL SPECIFICATION

MODEL	FS40-3
ARTICLE NO.	647418
WATTAGE	45W
WEIGHT	2.2kg
VOLTAGE	220-240V~
FREQUENCY	50-60Hz

TECHINICAL INFORMATION

Information to identify the model(s) to which the information relates to			
Description	Symbol	Value	Unit
Model identifier(s): 647418			
Maximum fan flow rate	F	40,59	m ³ /min
Fan power input	P	44,8	W
Service value	SV	0,91	(m ³ /min)/W
Standby power consumption	P _{SB}	--	W
Fan sound power level	L _{WA}	51,69	dB(A)
Maximum air velocity	C	2,68	metres/sec
Measurement standard for service value	EN IEC 60879:2019		

ICON EXPLANATION



This appliance conforms to relevant directives of The European Community.



The product complies with the applicable UK directives.




Class II appliance.



This marking indicates that this product should not be disposed with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used appliance, please use the return and collection systems or contact the store where the appliance was purchased. They can take this product for environmentally safe recycling.

PRODUCT STRUCTURE

- 01 Motor
- 02 Oscillation knob
- 03 Inner pipe
- 04 Screw
- 05 Decorative cap
- 06 Height adjustment control collar
- 07 Switch rotate ring
- 08 Locking nut
- 09 Blade cap
- 10 Back safety grille
- 11 Fan blade
- 12 Front safety grille
- 13 Bar A
- 14 Bar B
- 15 Safety screw and nut

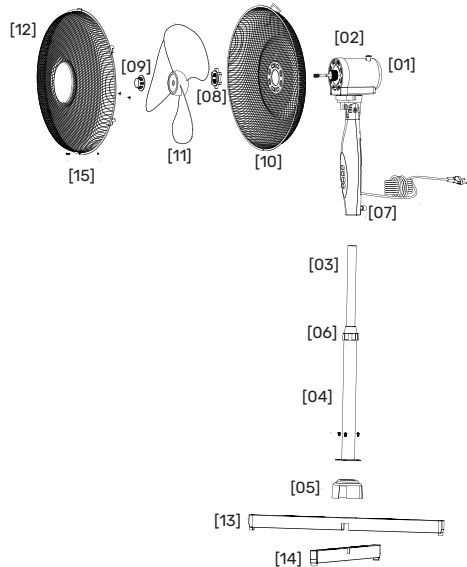

BODY ASSEMBLY

1. Loosen and remove the four screws (04) from the bar A (13) and bar B (14). Then cross bar A (13) and bar B (14) so that they interlock. Be sure to align the four holes in the bars with the outer tube. Tighten the outer tube to the bars with the four screws.
2. Loosen and remove the height adjustment control collar (06) from the top of the inner pipe. Put the base decorative cap (05) down to the base through the tube inside.
3. Replace the height adjustment control collar (06) on top of the inner pipe (03). Pull the inner pipe (03) out from the outer tube to adjust the tube to the desired height and tighten the collar.
4. Slightly loosen the switch rotate ring (07) by turning it anti-clockwise. Put the switch box down over the inner pipe and tighten the switch rotate ring. Make sure it is tightly secured.

FAN GRILLE ASSEMBLY

1. Remove locking nut (08) by turning it anti-clockwise from the motor shaft.
2. Place the back safety grille (10) into position. The slots on the grille should align with the plastic rod on the front motor cover. If this is done correctly, the safety grille's carry handle will be at the top.
3. Fix the back safety grille (10) into position by replacing the locking nut (08) tighten by hand. Do not twist the locking nut too hard.
4. The groove in the centre of the fan blade (11) aligns with bolt on the motor shaft to ensure correct positioning.
5. Fix the blade into the motor shaft gently by hand, and tighten the blade cap (09) by turning anti-clockwise onto the end of the motor shaft.
6. Mount the front safety grille (12) onto the back safety grille (10), by hanging the top hook clip of the front grille over the top of the back safety grille. Close the clasps all around the grille, finally fit the safety screw and nut (15) through the hole in the bottom edge of the front grille and tighten.

OPERATION

Insert the power plug

Speed Control

Speed is controlled by the button switch.

(0=OFF, 1=Low, 2=Medium, 3=High).

To turn the fan on, press the desired button switch.

(1=Low, 2=Medium, 3=High).

Oscillation Control

To make the fan oscillate, push down on the oscillation knob (02) located on the top of the motor housing. To stop the fan from oscillating, pull up on the oscillation knob when the fan is in the desired position.

Tilt Control

The airflow can be adjusted upward or downward by tilting the fan head as desired.


CLEANING

1. Always unplug the fan before cleaning.
2. Use a soft damp cloth with a mild soap to clean the fan. DO NOT use abrasive cleaners.
3. DO NOT immerse the fan in water and never allow water to drop into the motor component.
4. DO NOT use petrol, thinner or other chemicals to clean the fan.

STORAGE

- Store the device and any accessories in a dry, well-ventilated place.
- In case of longer periods without operation, protect the device and its accessories against soiling and corrosion.

PLUG REPLACEMENT

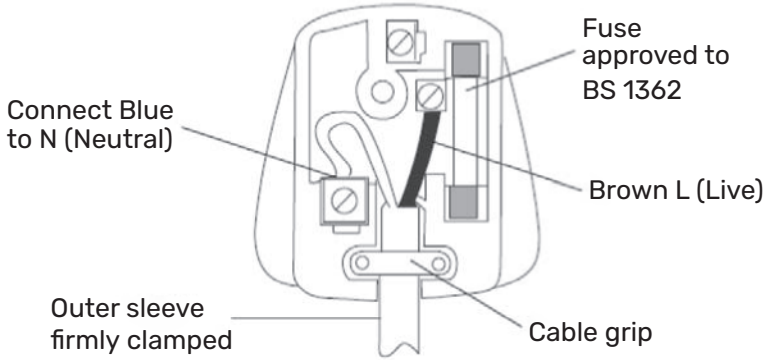

If you need to replace the fitted plug, then follow the instructions below.

⚠ WARNING! The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral
Brown – Live

As the colour of the wire in the mains lead of this appliance may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked N or coloured black.

The brown wire must be connected to the terminal marked L or coloured red.

⚠ WARNING! Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved BS 1363 or BS 1363/A plug and correctly rated BS 1362 3 Amp fuse. If in doubt, consult a qualified electrician.

NOTE: If a moulded plug is fitted and has to be removed, take great care in disposing of the plug and severed cable; it must be destroyed to prevent it being accidentally plugged into a power socket.

WARRANTY

This product is covered by a 2 year warranty.

The warranty covers any manufacturing defect in materials, workmanship and finish.

Any claim under this warranty must be made by going to your nearest Homebase store, taking your proof of purchase with you, and claims must be made within 2 years of the date of purchase.

We will offer you a free repair of the item where this is possible, or a replacement or a refund. Your statutory rights remain unaffected, in particular any rights you may have under the Consumer Rights Act 2015.

This warranty is given by HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Please note: This warranty does not apply to products misused or neglected and only covers domestic use. It does not apply to commercial use of the product.