 
 
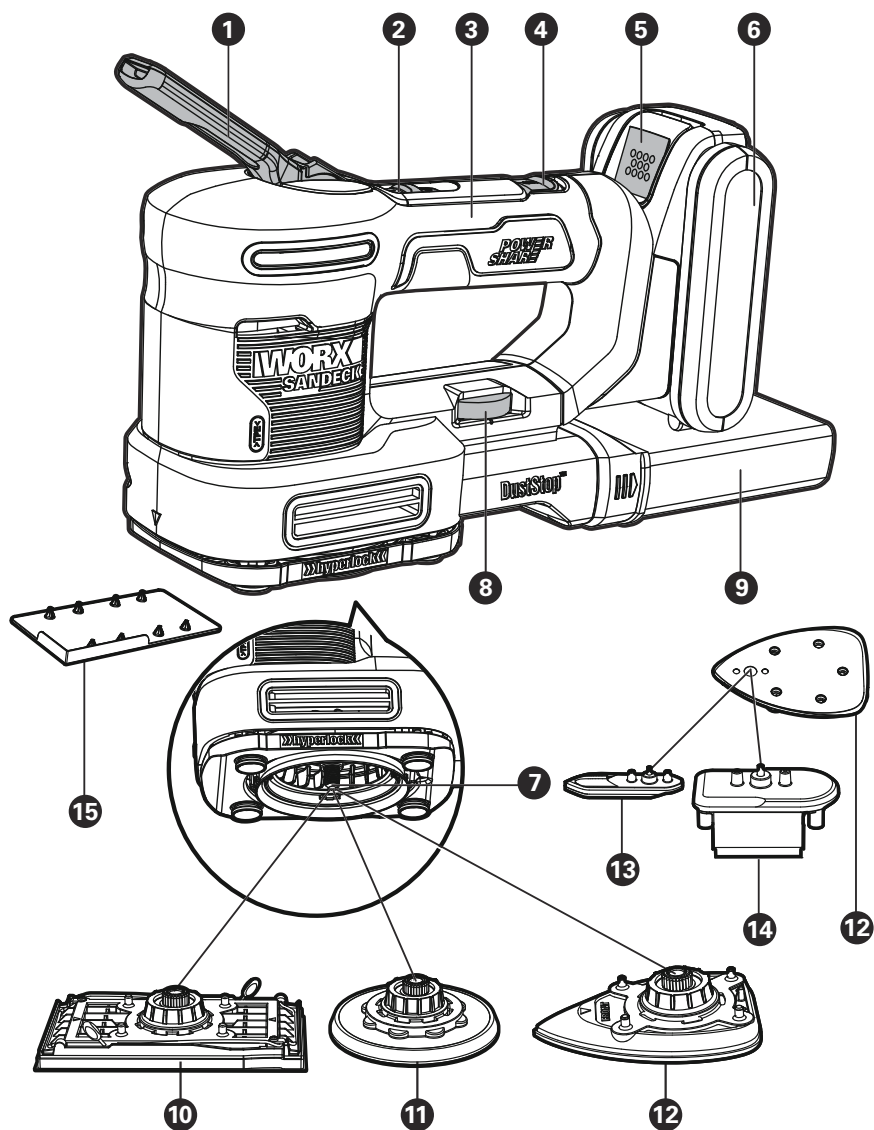 
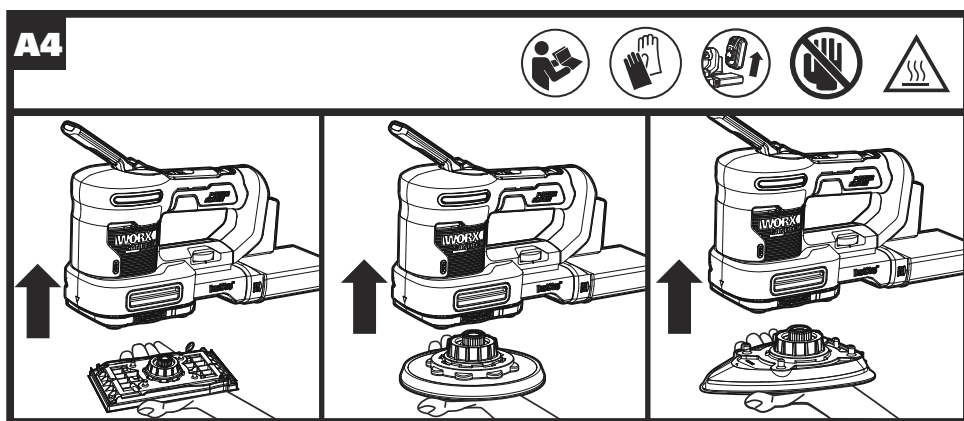 
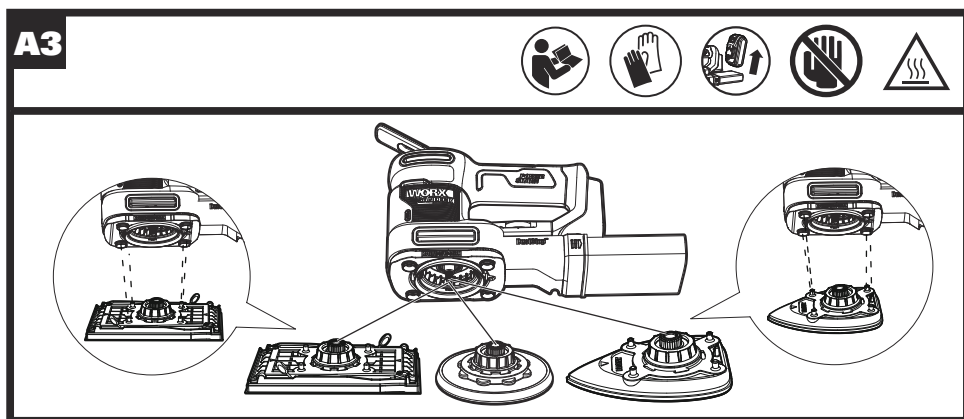 


 
 
 
 
 
5-in-1 Multi Sander	EN	P09
5-in-1 Multi-Schleifer	D	P16
Multiponceuse 5 en 1	F	P22
Levigatrice multifunzione 5 in 1	I	P29
Lijadora multifunción 5 en 1	ES	P36
5-in-1 multischuurmachine	NL	P43
5-w-1 szlifierka wielofunkcyjna	PL	P50
5 az 1-ben multifunkciós csiszológép	HU	P57
Mașină de șlefuit 5 în 1	RO	P64
Multifunkční bruska 5 v 1	CZ	P71
Multifunkčná brúska 5 v 1	SK	P78
Lixadeira multiusos 5 em 1	PT	P85
5-i-1 Multi slipmaskin	SV	P92
Večnamenski brusilnik 5-v-1	SL	P98

 
 
 
 
 
 
WX820 WX820.1 WX820.9

 
 
Original instructions	EN
Originalbetriebsanleitung	D
Notice originale	F
Istruzioni originali	I
Manual original	ES
Oorspronkelijke gebruiksaanwijzing	NL
Instrukcja oryginalna	PL
Eredeti használati utasítás	HU
Instrucțiuni originale	RO
Původní návod k používání	CZ
Pôvodný návod na použitie	SK
Manual original	PT
Bruksanvisning i original	SV
Izvirna navodila	SL

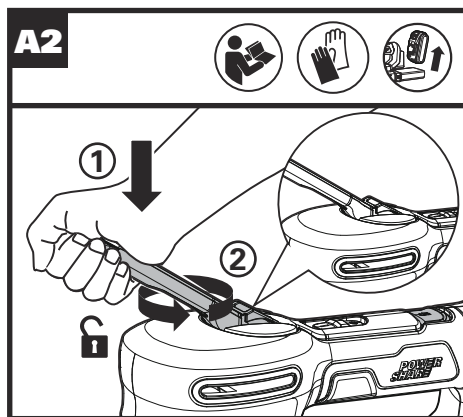

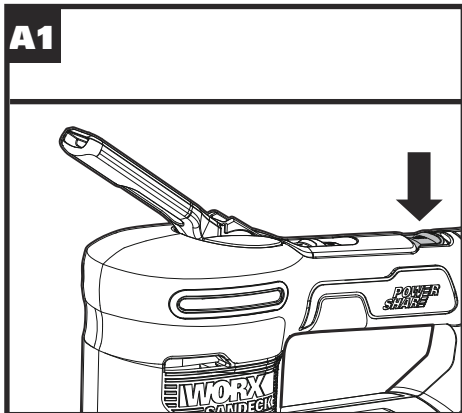 


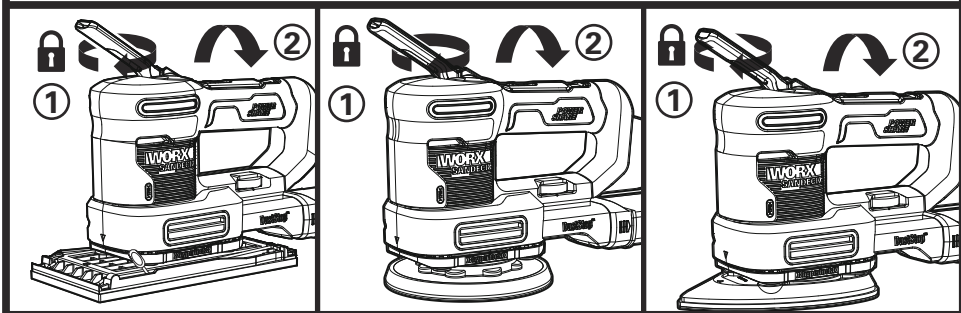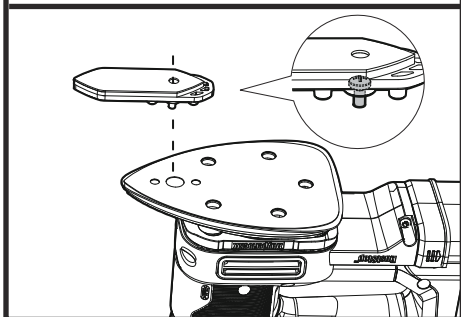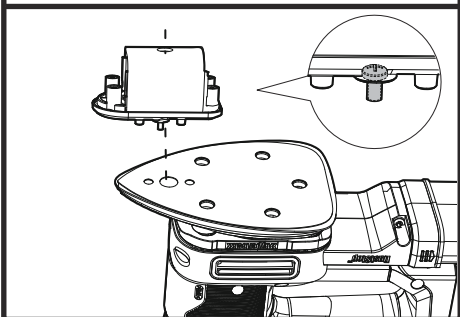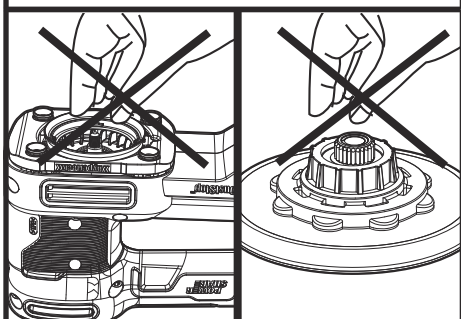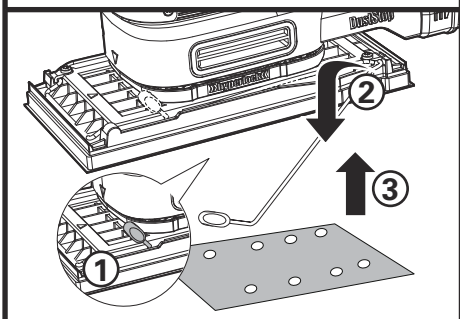A5**A6****A7****A8****B1**

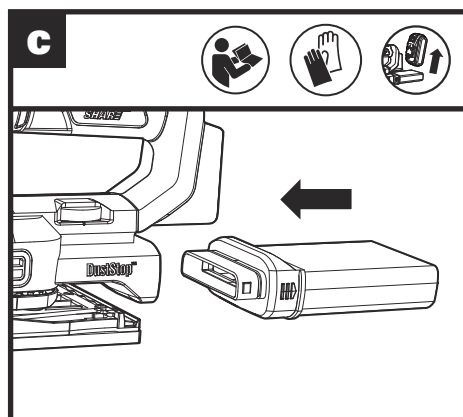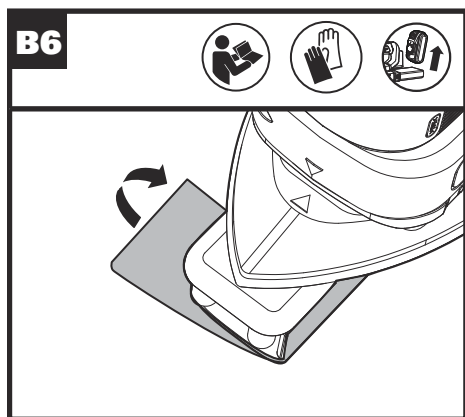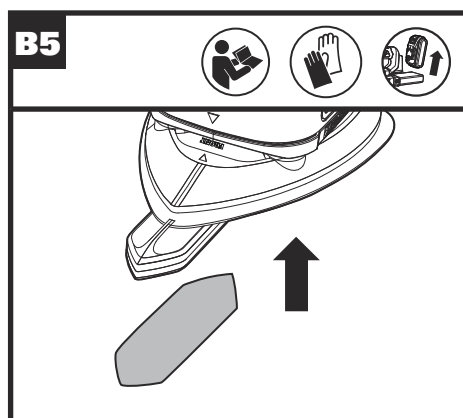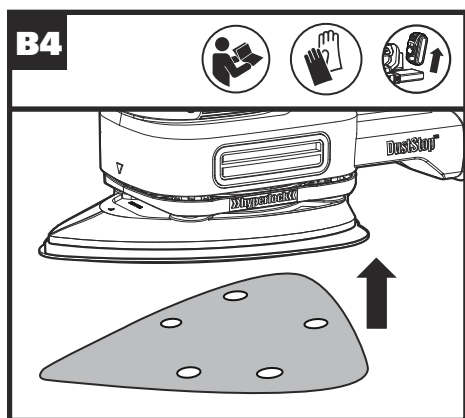 
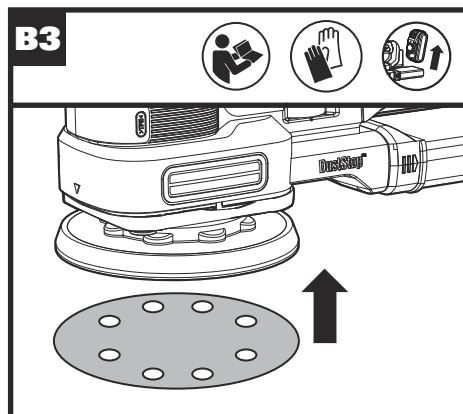 
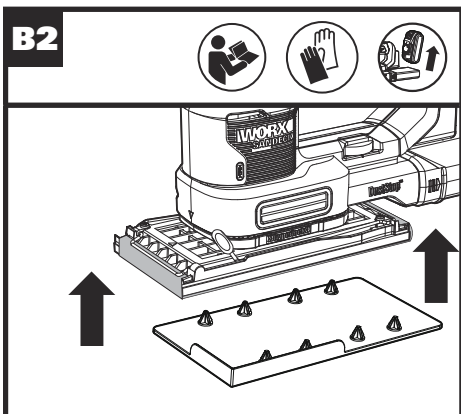 


 
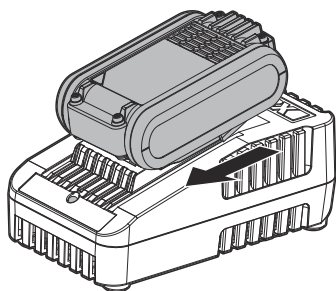 
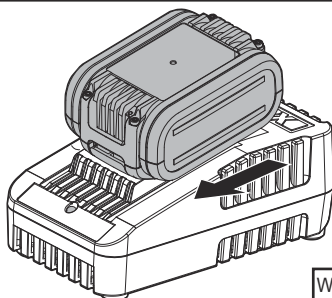 
D1WX820
WX820.1**D2**

WX820.1

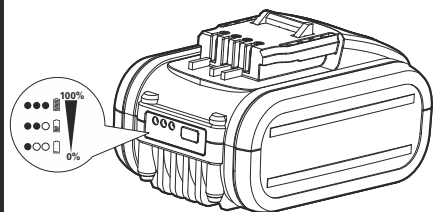D3

WX820.1

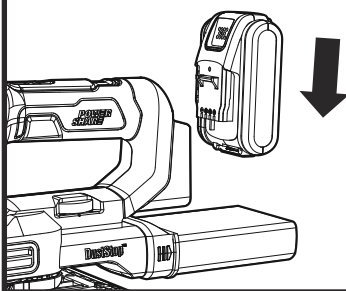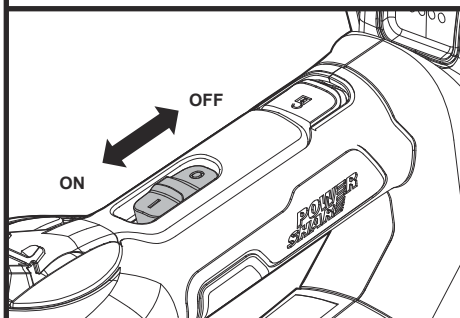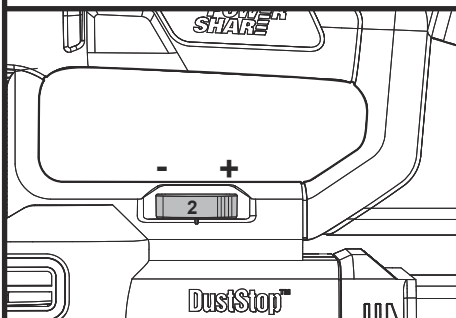E**F****G**

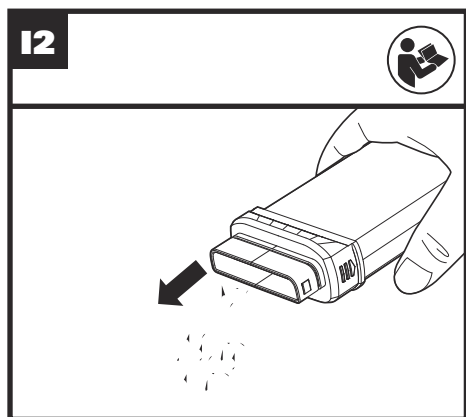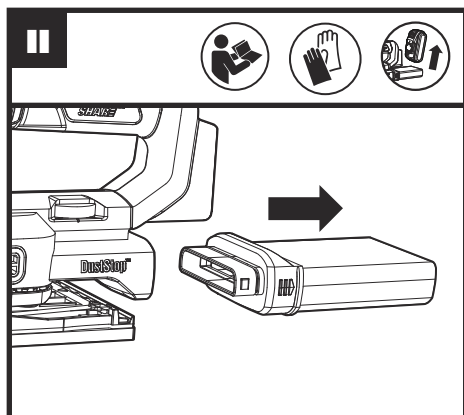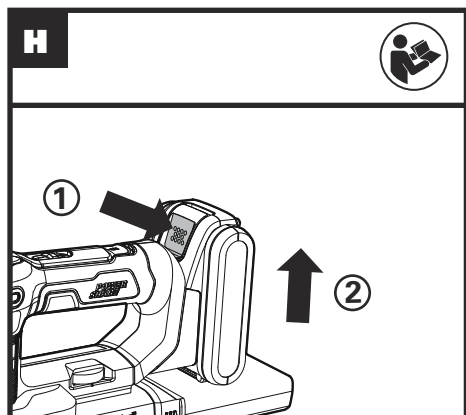

GENERAL POWER TOOL SAFETY WARNINGS



WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. WORK AREA SAFETY

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. ELECTRICAL SAFETY

- a) **Power tool plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. PERSONAL SAFETY

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of**

drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
 - c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
 - d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
 - e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
 - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
 - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
 - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- ## 4. POWER TOOL USE AND CARE
- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
 - b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
 - c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
 - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
 - e) **Maintain power tools and accessories. Check for misalignment or binding of**

moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5. BATTERY TOOL USE AND CARE

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6. SERVICE

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

- b) **Never service damaged battery packs.**

Service of battery packs should only be performed by the manufacturer or authorized service providers.

SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) **Keep battery pack clean and dry.**
- h) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- j) **Do not maintain battery pack on charge when not in use.**
- k) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- l) **Battery pack gives its best performance when it is operated at normal room temperature (20 °C ± 5 °C).**
- m) **When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.**
- n) **Recharge only with the charger specified by WORX. Do not use any charger other than that specifically provided for use with the equipment.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- o) **Do not use any battery pack which is not designed for use with the equipment.**
- p) **Keep battery pack out of the reach of children.**
- q) **Retain the original product literature for future reference.**

- r) **Remove the battery from the equipment when not in use.**
s) **Dispose of properly.**

SYMBOLS

	To reduce the risk of injury, user must read instruction manual
	Warning
	Wear ear protection
	Wear eye protection
	Wear dust mask
	Make sure the battery is removed prior to changing accessories.
	Prohibit hands enter before moving parts stop
	Lock
	Unlock
	Wear protective gloves
	Do not burn
	Do not expose to rain or water

	Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.
	Do not dispose of batteries. Return exhausted batteries to your local collection or recycling point.
	Hot! Do not touch


COMPONENT LIST

1. HYPERLOCK™ ACCESSORY CLAMPING LEVER	11
2. ON/OFF SWITCH	
3. HANDLE	
4. HYPERLOCK™ RELEASE BUTTON	
5. BATTERY PACK RELEASE BUTTON*	
6. BATTERY PACK*	
7. PLATE INTERFACE	
8. VARIABLE SPEED DIAL	
9. DUST BAG	
10. FINISHING PLATE	
11. RANDOM ORBIT PLATE	
12. DETAIL PLATE	
13. FINGER PLATE	
14. CONTOUR PLATE	
15. PAPER PUNCH	

* Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

Type Designation **WX820 WX820.1 WX820.9**
(82-designation of machinery, representative of Multi Sander)

	WX820	WX820.1	WX820.9
Charger Voltage	100-240V ~ 50/60Hz		
Voltage	20 V  Max**		
No-load speed	4000-10000 /min		
Orbital diameter	Random orbit-2.5mm, Finish-1.8mm, Detail-1.8mm		
Speed settings	1-6		
Machine weight	2.0kg		1.5kg

** Voltage measured without workload. Initial battery voltage reaches maximum of 20 volts. Nominal voltage is 18 volts.

NOISE INFORMATION

A weighted sound pressure	L_{pA} : 77.6dB(A)
A weighted sound power	L_{WA} : 88.6dB(A)
K_{pA} & K_{WA}	3 dB(A)

Wear ear protection.



VIBRATION INFORMATION

Vibration total values (triax vector sum) determined according to EN 62841:

Vibration emission value:	$a_h = 3.731 \text{ m/s}^2$
	Uncertainty $K = 1.5 \text{ m/s}^2$

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another.

The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used especially what kind of workpiece is processed dependant on the following examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained.

The use of the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration and noise accessories are used.

And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period. Helping to minimise your vibration and noise exposure risk. Always use sharp chisels, drills and blades. Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate). If the tool is to be used regularly then invest in anti vibration and noise accessories. Plan your work schedule to spread any high vibration tool use across a number of days.

ACCESSORIES

	WX820	WX820.1	WX820.9
Battery pack (WA3551.1)	1	1	/
Battery pack (WA3553)	/	1	/
Charger (WA3880)	1	1	/
Finishing plate	1	1	1
Random Orbit plate	1	1	1
Detail plate	1	1	1
Finger plate	1	1	1
Contour plate	1	1	1
Dust bag	1	1	1
Paper punch	1	1	1

185*95mm Finishing sanding paper	3	3	3
125mm Random orbit H&L sanding paper	3	3	3
140*90mm Detail H&L sanding paper	3	3	3
76*30mm Finger H&L sanding paper	3	3	3
100*50mm Contour H&L sanding paper	3	3	3

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATING INSTRUCTIONS




NOTE: Before using the tool, read the instruction book carefully.

INTENDED USE:

This machine is intended for dry sanding of wood, plastic, filler and coated surfaces. The sander is not to be used for plaster or spackle.

ASSEMBLY AND OPERATION

ACTION	FIGURE
ASSEMBLY	
Fitting & Replacing the Sanding Plate Note: Read and understand the instructions before assembling or changing sanding plates. Note: Open the Hyperlock lever completely when attaching or removing a sanding plate. Note: When assembling the finishing plate/detail plate, first check the assembling direction.	See Fig. A1-A8
WARNING! The sanding plate must be attached before starting the sander.	
WARNING! Avoid pinching hands and fingers when using the hyperlock™.	
WARNING! Do not touch the bottom fan after use to avoid high-temperature burns.	

Fitting the Sanding Paper	See Fig. B1-B6																											
Attaching the Dust Bag  Caution: To prevent the possibility of dust or a foreign body being thrown into your face or eyes, never attempt to use your sander without the dust bag properly installed.	See Fig. C																											
Charging the Battery Pack	See Fig. D1,D2,D3																											
Installing the Battery Pack	See Fig. E																											
OPERATION																												
Switching On/Off	See Fig. F																											
Using the Variable Speed Dial (Speed settings 1-6) -The Variable Speed Dial can be used to set the optimum speed according to the sanding plate used and the respective application.	See Fig. G																											
<table><tr><th>Application</th><th>Sanding paper</th><th>Speed</th></tr><tr><td>Sanding down varnishes</td><td>180...400</td><td>3-6</td></tr><tr><td>Sanding paint</td><td>40...120</td><td>4-6</td></tr><tr><td>Touching up paintwork</td><td>120...240</td><td>1-5</td></tr><tr><td>Sanding wood</td><td>60...240</td><td>1-6</td></tr><tr><td>Machining veneer</td><td>180...240</td><td>3-5</td></tr><tr><td>Derusting metal</td><td>40...120</td><td>4-6</td></tr><tr><td>Sanding metal and steel</td><td>120...240</td><td>4-6</td></tr><tr><td>Sanding curved surface</td><td>60...240</td><td>1-6</td></tr></table>		Application	Sanding paper	Speed	Sanding down varnishes	180...400	3-6	Sanding paint	40...120	4-6	Touching up paintwork	120...240	1-5	Sanding wood	60...240	1-6	Machining veneer	180...240	3-5	Derusting metal	40...120	4-6	Sanding metal and steel	120...240	4-6	Sanding curved surface	60...240	1-6
Application		Sanding paper	Speed																									
Sanding down varnishes		180...400	3-6																									
Sanding paint		40...120	4-6																									
Touching up paintwork		120...240	1-5																									
Sanding wood		60...240	1-6																									
Machining veneer		180...240	3-5																									
Derusting metal		40...120	4-6																									
Sanding metal and steel	120...240	4-6																										
Sanding curved surface	60...240	1-6																										
Removing the Battery Pack	See Fig. H																											
Emptying the Dust Bag -For more efficient operation, empty dusts bag every 5-10 mins.	See Fig. I1-I2																											

WORKING HINTS FOR YOUR MULTI SANDER

If your power tool becomes too hot, especially when used at low speed, set the speed to maximum and run it with no load for 2-3 minutes to cool the motor. Avoid prolonged usage at very low speed. Always use sand paper that is suitable for the material you

want to sand.

Always ensure the work-piece is firmly held or clamped to prevent movement.

Any movement of the material may affect the quality of the sanding finish.

Start your sander before sanding and turn it off only after you stop sanding. For the best results, sand wood in the direction of the grain.

Do not start sanding without having the sandpaper fitted.

Do not allow the sandpaper to wear away it will damage the base-plate. The guarantee does not cover base-plate wear and tear.

Use coarse grit paper to sand rough surfaces, medium grit for smooth surfaces and fine grit for the final surfaces. If necessary, first make a test run on scrap material.

Use only good quality sandpaper.

The sandpaper controls the sanding efficiency, not the amount of force you apply to the tool. Excessive force will reduce the sanding efficiency and cause motor overload. Replacing the sandpaper regularly will maintain optimum sanding efficiency.

MAINTENANCE

Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

FOR BATTERY TOOLS

The ambient temperature range for the use and storage of tool and battery is 0°C-45°C.

The recommended ambient temperature range for the charging system during charging is 0°C-40°C.

ENVIRONMENTAL PROTECTION



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

DECLARATION OF CONFORMITY

We,

Positec Germany GmbH

Grüner Weg 10, 50825 Cologne, Germany

Declare that the product

Description **WORX Battery operated Multi Sanders**

Type Designation **WX820 WX820.1 WX820.9 (82-designation of machinery, representative of Multi Sander)**

Function **Remove surface material using an abrasive medium**

Complies with the following Directives:

2006/42/EC, 2014/30/EU, 2011/65/EU

Standards conform to

EN 62841-1, EN 62841-2-4, EN 55014-1, EN 55014-2

The person authorized to compile the technical file,

Name **Marcel Filz**

Address **Positec Germany GmbH Grüner Weg 10, 50825 Cologne, Germany**



2019/08/16

Allen Ding

Deputy Chief Engineer, Testing & Certification

Positec Technology (China) Co., Ltd

18, Dongwang Road, Suzhou Industrial

Park, Jiangsu 215123, P. R. China



www.worx.com

Copyright © 2019, Positec. All Rights Reserved.
AR01402603