

Size: 210 x 292 mm

# HOMEBASE

## 8ft INFLATABLE SANTA WITH NORTH POLE SIGN



### INSTRUCTION MANUAL

**IMPORTANT:** Please read these instructions before using the product and retain for future use.  
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

V1\_2024

Size: 210 x 292 mm

#### Product specifications

- Rated input: 12V DC Max. 12W
- Bulb rating: 3V 0.2W/3V 2W
- Transformer: JT-DC12V12W-IP44

#### Operating instructions

1. Unpack the product and transformer from the box.
2. Unwind the lead-in cable cord from the transformer.
3. Choose a suitable location for the product where it can be properly secured against windy conditions.
4. FULLY OPEN THE INFLATABLE FLAT ON THE GROUND EVENLY BEFORE INFLATING . NOTE: THE AIR INLET MUST BE FACING UP, WITHOUT ANY BLOCKAGE. THE ZIPPER SHOULD BE FULLY CLOSED.
5. To secure, use the stakes provided and insert them through the nylon hooks attached at the bottom of product. For the nylon hooks attached to the product body, use the provided ropes and firmly secure them to the stakes.
6. The recommended angle for the ropes is 15°-45° from the top, as this provides the most balance for the product.
7. In the event that you are setting up the product on a hard surface, please use sandbags to secure (not supplied).
8. Plug the transformer into a mains socket and turn the main switch ON.
9. The inflatable will inflate to the correct size within a few minutes. If it is not inflating, it is possible that the passage from the fan to the inflatable is obstructed. Turn the adaptor OFF and adjust if required.

#### Caution

- Please read these instructions carefully. Keep these instructions in a safe place for future reference.
- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind cord before use. Do not connect the product to the power supply whilst the product is in the packaging.
- Always ensure that the inlet fan is clear of obstructions such as long grass etc. When installing to ensure full inflation lift the product clear of the ground to allow free air flow.
- Do not attempt to inflate this unit during extreme weather conditions, for example strong winds, heavy rain/snow, cold temperatures lower than -10 degrees. Turn OFF the inflatable and bring it indoors.
- This light is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light.
- This product is intended for occasional decoration only. Not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustment.
- The external flexible cable or cord of this light cannot be replaced; if the cord is damaged, the product must be destroyed.
- Do not put your hands over the fan or put small objects through the fan grille.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.
- If a child is near the inflatable, it must be under the full supervision of an adult.
- The inflatable will inflate to the correct size within a few minutes. If it is not inflating, it is possible that the passage from the fan to the inflatable is obstructed. Turn the adaptor OFF and adjust if required.


#### Maintenance and cleaning

- Only use mild detergent with cold water to wipe.
- Leave the inflatable fully inflated, until it is completely dry.
- To store the inflatable away, make sure to unplug, roll up and store in the original packaging
- Do not attempt to wipe or open fan.

#### Repair

- If the inflatable figure is not staying inflated even when the fan is working at full power, it is likely that there is a hole or tear in the inflatable. Locate the source of the puncture, turn the inflatable ON and examine the holes or tear.
- Small holes can be patched up with tape. A thick clear packaging tape will work, as well as duct tape (not supplied).
- If the tape is not strong enough or holes are especially large, use a nylon patch. These patches can be obtained from your local arts and crafts store.
- Once the hole has been sealed, re-inflate product.

#### Disposal and recycling

-  Electrical products are labelled with the wheeled bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

#### Contents

- 1 x Inflatable
- 1 x Transformer
- 6 x Stakes
- 3 x 2m Ropes

