

HOMEBASE

REINDEER SPUN ACRYLIC SILHOUETTE



INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before using the product and retain for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576

Product specifications

- Rated input: 31V AC Max. 3.6W
- Bulb rating: 3V 0.03W
- Transformer: JT-EL/FC31V3.6W-H9

 
Caution

- For indoor or outdoor use. Always place the plug into an indoor mains socket or a weatherproof outdoor socket.
- Always unwind the cord before use. Do not connect the product to the power supply whilst the product is still in the packaging.
- This light set is constructed with non-replaceable LED bulbs. DO NOT attempt to replace any of the LED bulbs in the light set.
- This product is intended for occasional decoration only; not to be used by children as a toy, and not intended for household illumination.
- It is normal for the transformer to run a little warm. Please ensure it's used in a well ventilated area.
- Keep away from sources of heat and naked flames.
- Unplug when not in use.
- Always unplug from the mains supply whilst installing, carrying out maintenance or adjustments.
- The external flexible cable or cord of this light set cannot be replaced; if the cord is damaged, the light set must be destroyed.
- Use only with the supplied transformer.
- When storing away, make sure the area is dry. Avoid any damp, wet and humid areas.
- Please read these instructions carefully. Keep these instructions in a safe place for future reference.

Before you start

1. Study the 'Caution' section carefully.
2. Decide on an appropriate location for your product. Make sure that you have plenty of space, a level surface, and a clear dry area for assembly, then locate. Always try to assemble the product as close as possible to the intended location.
3. Check the pack and make sure you have all of the parts.
4. Remove all plastic packaging material and dispose of them safely.

Assembled dimensions

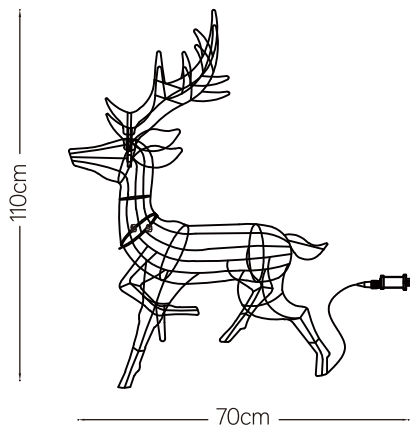


Parts list

No.	Parts list	Qty
1	Deer head	1
2	Deer body	1
3	Antlers	2
4	Ground stakes	4
5	Power transformer	1


Assembly

 Step 1

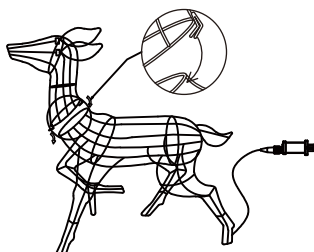


Attach the deer head (1) to the deer body (2).

 Step 2

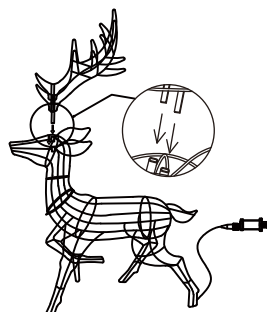


Attach the antlers (3) on the deer head (1).

 Step 3

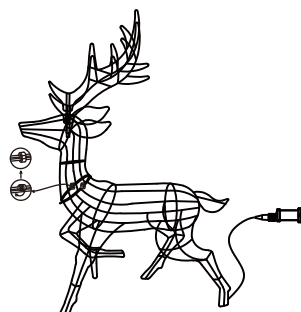

Fasten together the deer head (1) and the deer body (2). Rotate the C buckle on the upper part of the deer outwards, then press the wire under it to tighten.

 Step 4

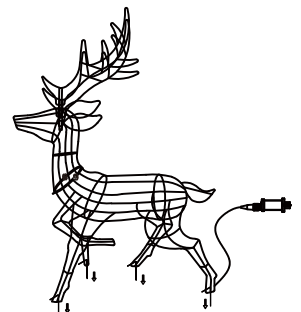

Assembly complete. If you position outdoors, please use the stakes (4) provided and fix them into the ground.

Operating instructions

1. Unpack the product from the box.
2. Choose a location to position the product. Please ensure it's stable, then use the stakes provided to secure it in place.
3. Connect the power transformer to the product, then plug the power transformer into the mains socket.
4. Press the button on the transformer sequentially to switch between the lighting modes below:
 - Combination.
 - LED 1 steady on: Warm white steady on.
 - LED 2 steady on: Bright white steady on.
 - LED 1 Slo-Glo: Warm white slow-glowing.
 - LED 2 Slo-Glo: Bright white slow-glowing.
 - LED 1 & LED 2 sequential: Warm white & Bright white sequential
 - LED 1 & LED 2 twinkle: Warm white & Bright white twinkling.
 - LED 1 & LED 2 slow fade: Warm white & Bright white slow fading.
 - Slo-Glo: Slow-glowing.
 - Off.
5. Unplug the power transformer when not in use.

Care and use

Before using or re-using the silhouette light, inspect the product carefully. If there are any damaged parts or exposed sharp points, please dispose of the silhouette light.

Disassembly and storage

Before storage, please repack the product as follows to avoid damage:

1. Gently lift off each section of the silhouette light.
2. Carefully place the silhouette light in its box and tape it shut.
3. STORE PRODUCT IN A COOL AND DRY LOCATION. AWAY FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40°C.

Disposal and recycling



Electrical products are labelled with the wheeled bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available.

Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

