



HARDWARE SUPPLIED

A MASONRY WALL INSTALLATION
4x

Masonry Plug


B PLASTERBOARD WALL INSTALLATION
4x

Plasterboard Plug

2x  Screw Hole Cover Sticker

4x  Plasterboard/Masonry Plug Screw 28mm (8 Gauge)

2x  Grub Screw 15mm (For securing shelf to bracket)

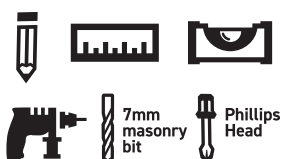TOOLS REQUIRED



CAPACITY

Weight load capacity can vary based on the type of wall you're affixing the shelf to. As a guideline please see below:

MAX 5KG*
PLASTERBOARD

MAX 10KG*
MASONRY

*LOAD EVENLY DISTRIBUTED

flexiTM
TIP


READ THROUGH INSTRUCTIONS BEFORE COMMENCING INSTALLATION

Screws and fixings for both masonry and stud walls are included.
TIP Use only the 4 holes in the bracket that best suit your fixing application.

STEP 1

Please read through Fixing Hints prior to commencing Steps.
Position bracket at desired height against the wall, and using a pencil, mark the 4 holes
Note: - Make sure the arrow on the bracket points up.
- Use spirit level to ensure bracket is level. (See Diagram 1)

DIAGRAM 1

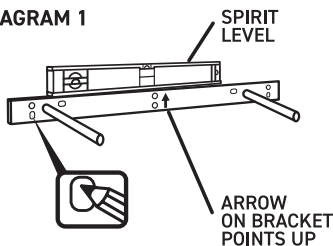

STEP 2

A (Masonry) Using a 7mm masonry drill bit, Drill a 40mm deep hole. Tap Wall Plug into hole (a light hammer may be required) until flush with wall surface. Position Bracket over installed Masonry Plug and install Masonry Plug Screw into wall plug.

B (Plasterboard) Using a Phillips head screwdriver, use force to thread plug through Plasterboard Wall until it is flush with the surface of the wall. Position Bracket over installed Plasterboard Plug and install Plasterboard Plug Screw into wall plug.

DIAGRAM 2

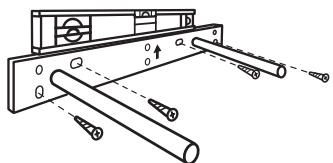


DIAGRAM 3A





DIAGRAM 3B

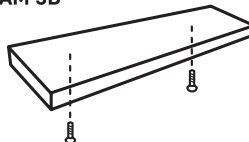

STEP 3

Slide the shelf onto the 2 tubes on the bracket.
Note:
- The 2 holes on the shelf face are to point down. (See Diagram 3A)
- Fix the shelf to the bracket by fitting the 2 countersunk head screws from underneath.
- Don't over-tighten (See Diagram 3B).
- Add stickers over screw holes.

FIXING HINTS:


- When mounting onto a plasterboard wall if possible mountings should be into at least 1 stud for added security. If holes do not align with stud, an extra hole could be drilled through the bracket to accommodate this.
- If mounting only into a plasterboard wall then spread the anchors apart. Try to use only one (upper or lower) of the twin holes as securing using at both of twin holes can weaken plaster.
- Note that when mounting into plasterboard wall, the anchors are only as strong as the wall they are mounted into. This could reduce the load capacity.

NOTE:


For safety, the bracket pipes are angled slightly upward to prevent shelf droop when shelf is loaded to capacity. Please note that Floating Shelves are designed for displaying infrequently used decorative items only. Please keep glass shelves from direct sunlight as UV light can cause discoloration.

HOW TO USE A PLASTERBOARD PLUG:

- Place Plasterboard Plug on the end of a screwdriver.



- Lightly pierce plasterboard where the anchor is to be installed using point of Plasterboard Plug. Use firm pressure and screw Plasterboard Plug into the plasterboard until the flat head is tight and flush against the plasterboard.



- Attach item to be fixed to the wall by driving the Plasterboard Plug Screw into the Plasterboard Plug.

