




Shown here: Relax interior in Grey Textile.

## PLANNING YOUR MODULAR STORAGE

Whether you're planning a standalone interior system or storage behind your sliding doors, use our guide to help you plan the best configuration for your space.

### 1 MEASURE UP

It's really important to prepare your project by measuring up your space. This will ensure the chosen storage system fits perfectly.

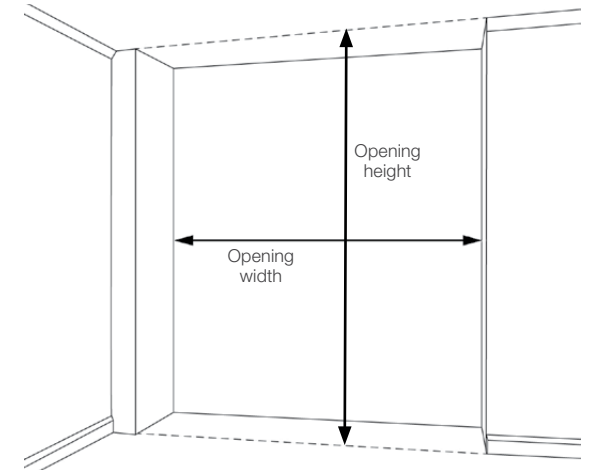

### 2 CHOOSE YOUR STORAGE SYSTEM

Now you have your measurements, you can start to plan your interior storage solution. Our stanchion based systems can run from floor to ceiling or floor to wall depending on your space and needs.

#### RELAX

Stanchion width **30mm**

For **550mm** accessories.  
Width plus 2 stanchions  
= **610mm**

For **900mm** accessories.  
Width plus 2 stanchions  
= **960mm**

#### AURA

Stanchion width **25mm**


For **550mm** accessories.  
Width plus 2 stanchions  
= **600mm**

For **900mm** accessories.  
Width plus 2 stanchions  
= **950mm**

### 3 PLAN YOUR MODULAR STORAGE



When planning your modular storage interior, start with the first column to the far side of your space, then add on additional columns until you have filled your space.

Most accessories are 550mm or 900mm wide, but we have adjustable components that can be cut to size to fill in that extra space.

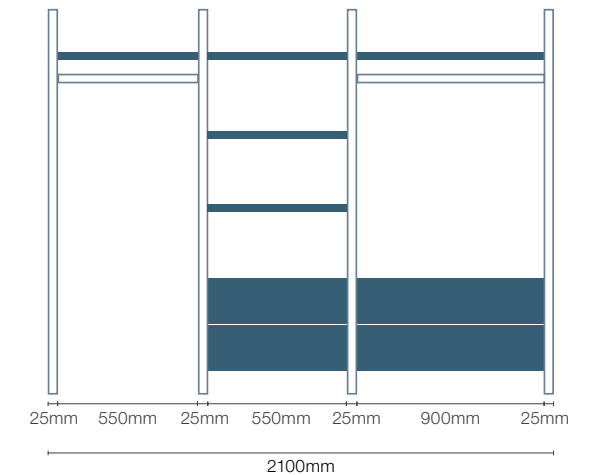


### ACCESSORY PLACEMENT & ARRANGEMENT WITH DOORS


When using any pull out accessory (i.e. drawer units) we recommend making your doors at least 80mm wider than the storage column behind. This gives you plenty of breathing space for the drawers to open without clashing with where the doors cross over.

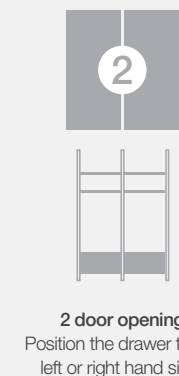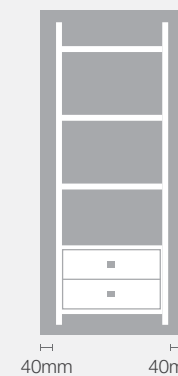

**2 door opening**  
Position the drawer to the left or right hand side.

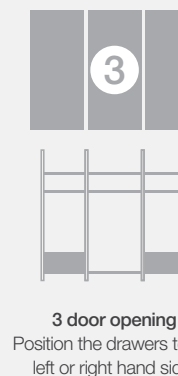

**3 door opening**  
Position the drawers to the left or right hand side.

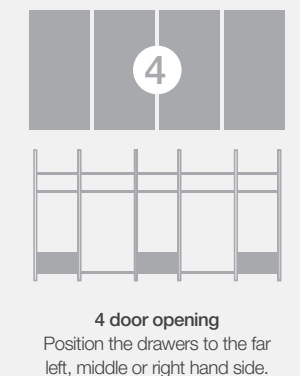

**4 door opening**  
Position the drawers to the far left, middle or right hand side.