


FREESTANDING SLIDING WARDROBE

Assembly Instructions





- 1x Top panel **A**
- 2x Side panels **B&C**
- 1x Base panel **I**
- 1x Vertical divider panel **G**
- 2x Back panels **D**
- 4x Horizontal supports **F**
- 3x Shelves **H**
- 1x Top track **J**
- 1x Bottom floor track **K**
- 3x Hanger Bars **E**

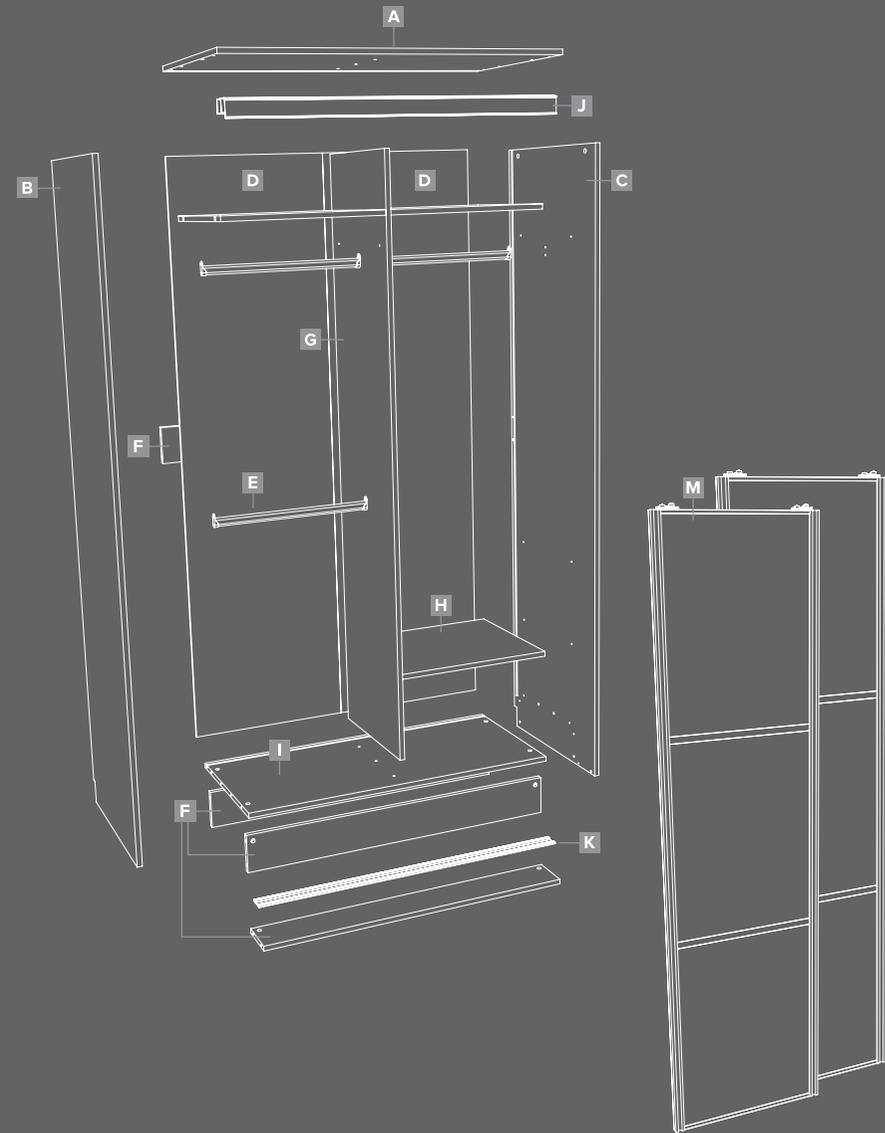


RECOMMENDED:


- Tools: Pozidrive screwdriver x2
- Two person build 

*A drop of glue (8) needs to be added into all holes the wooden dowels are placed into (2).

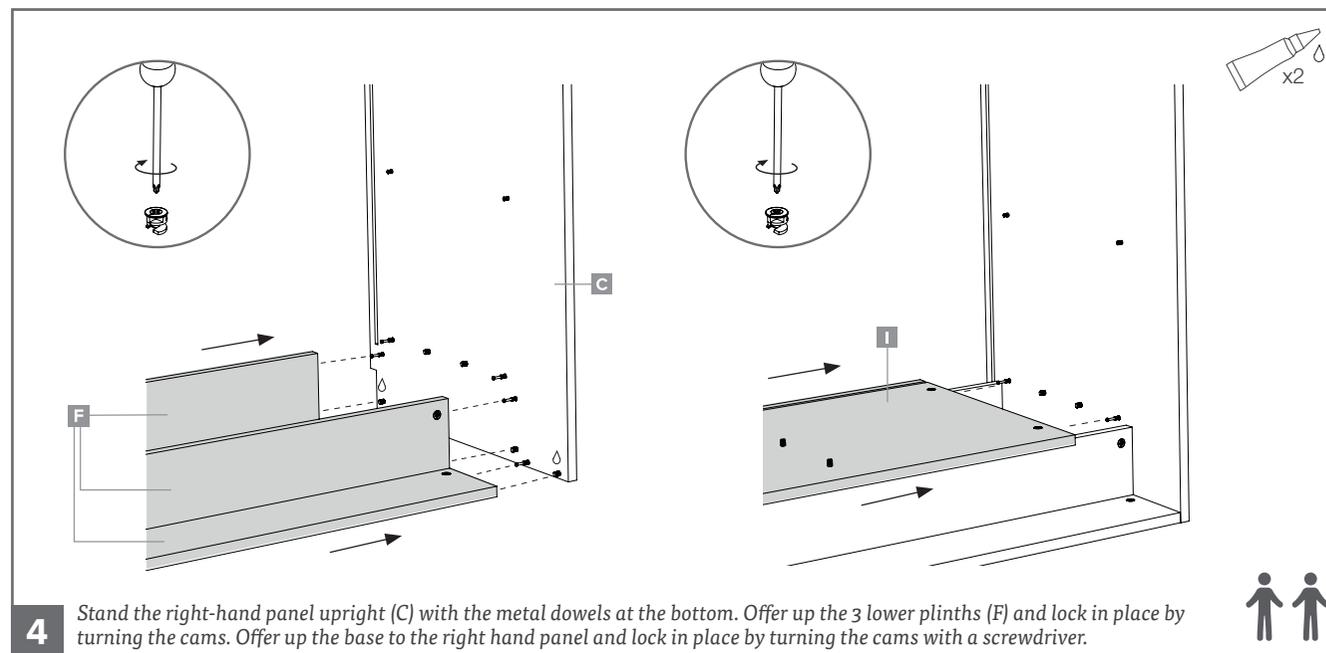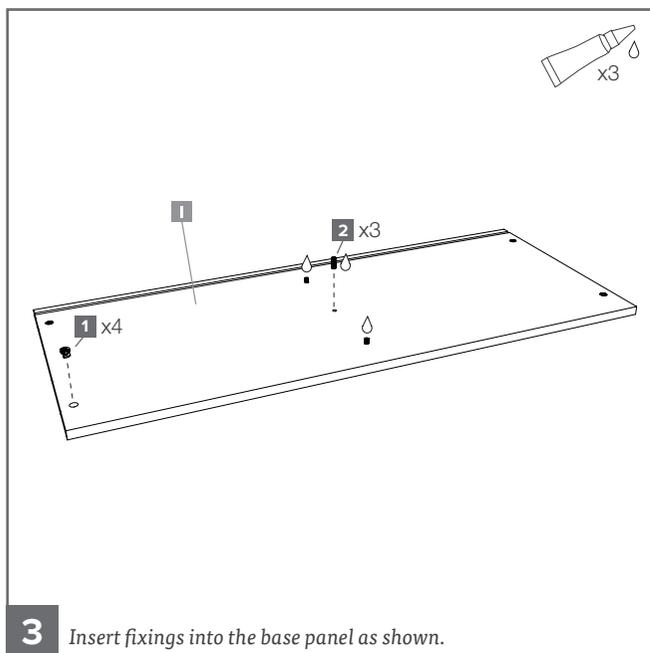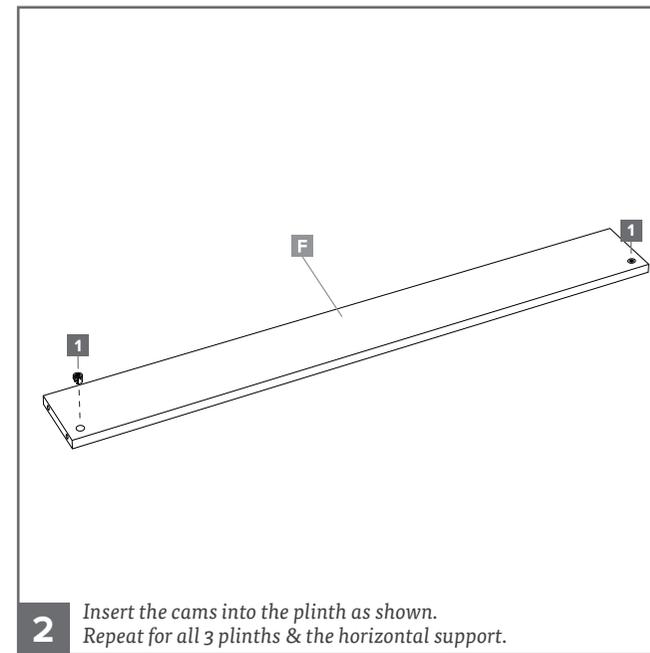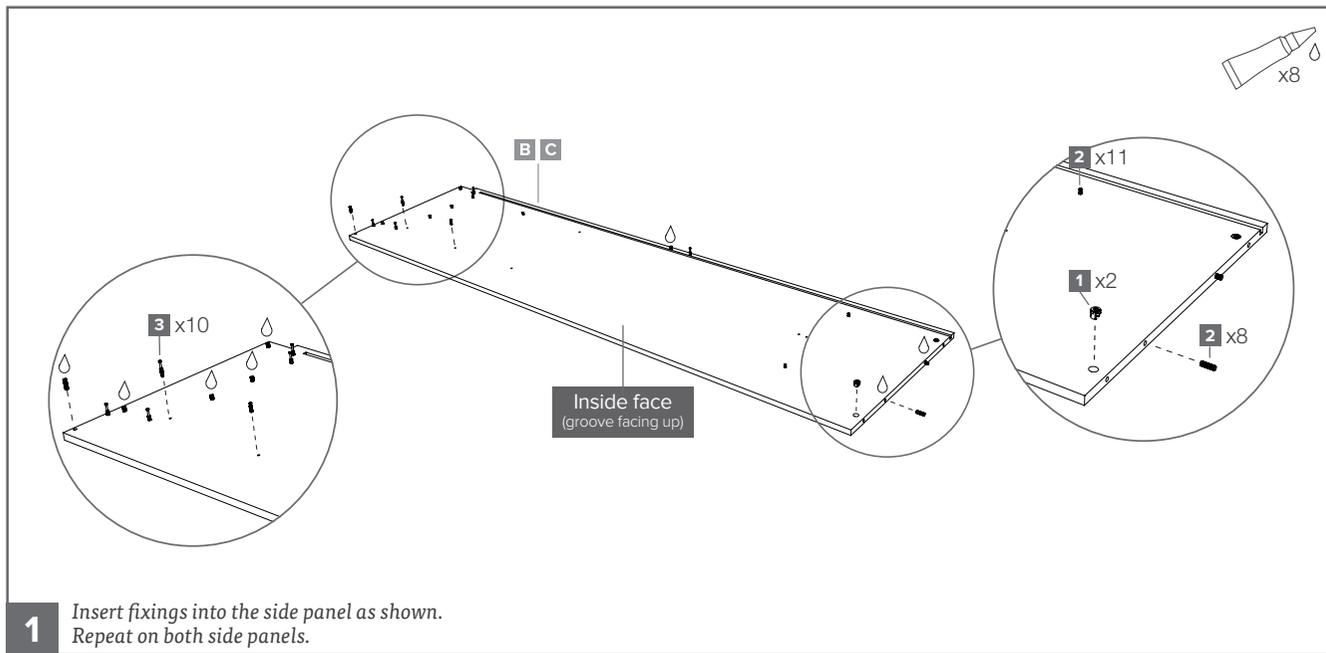


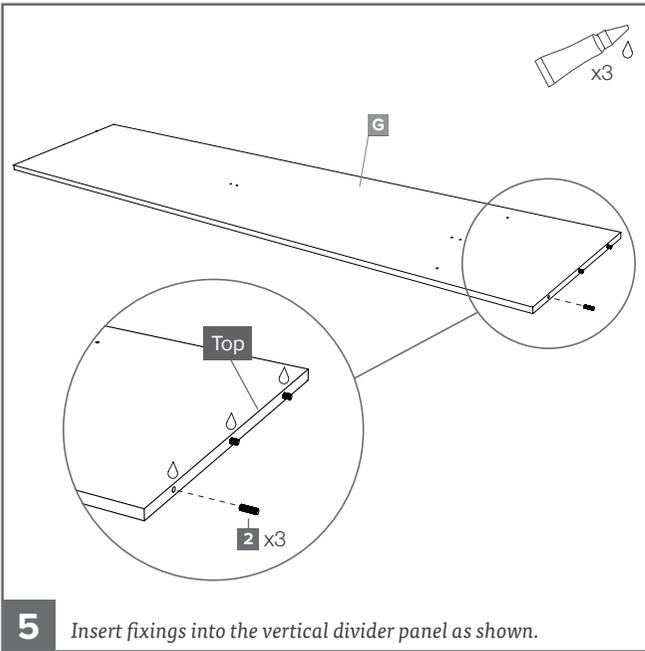


5 Insert fixings into the vertical divider panel as shown.

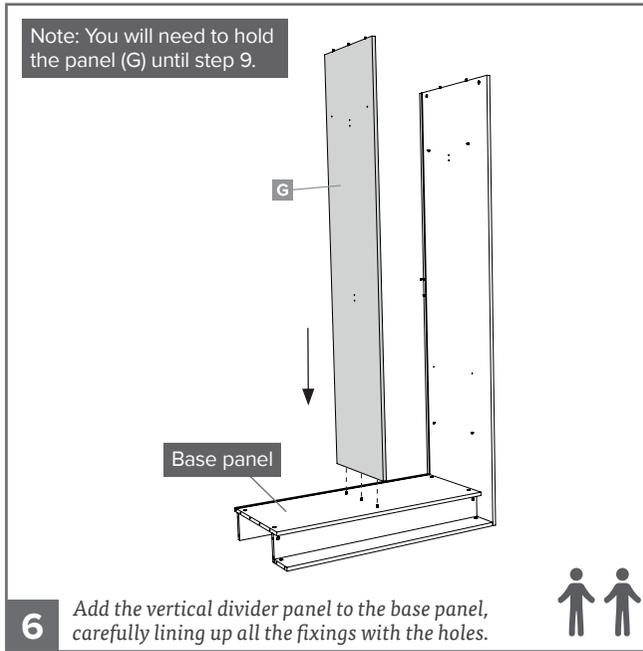


6 Add the vertical divider panel to the base panel, carefully lining up all the fixings with the holes.

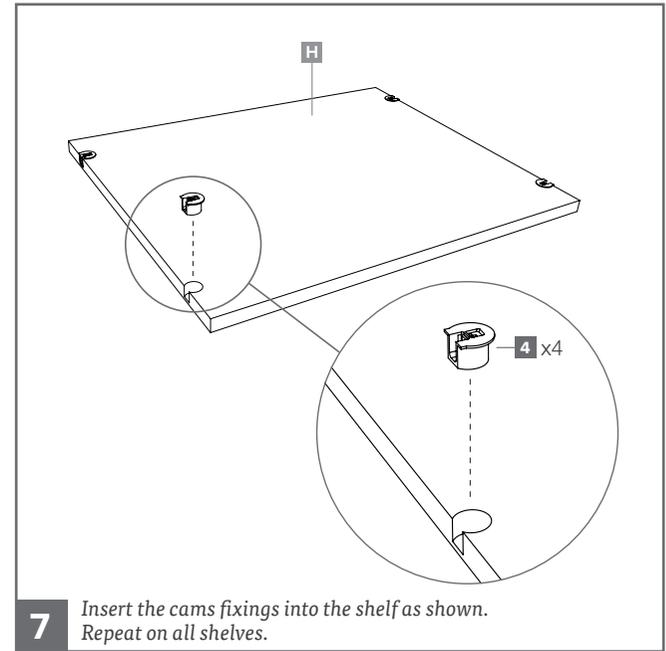


7 Insert the cams fixings into the shelf as shown. Repeat on all shelves.

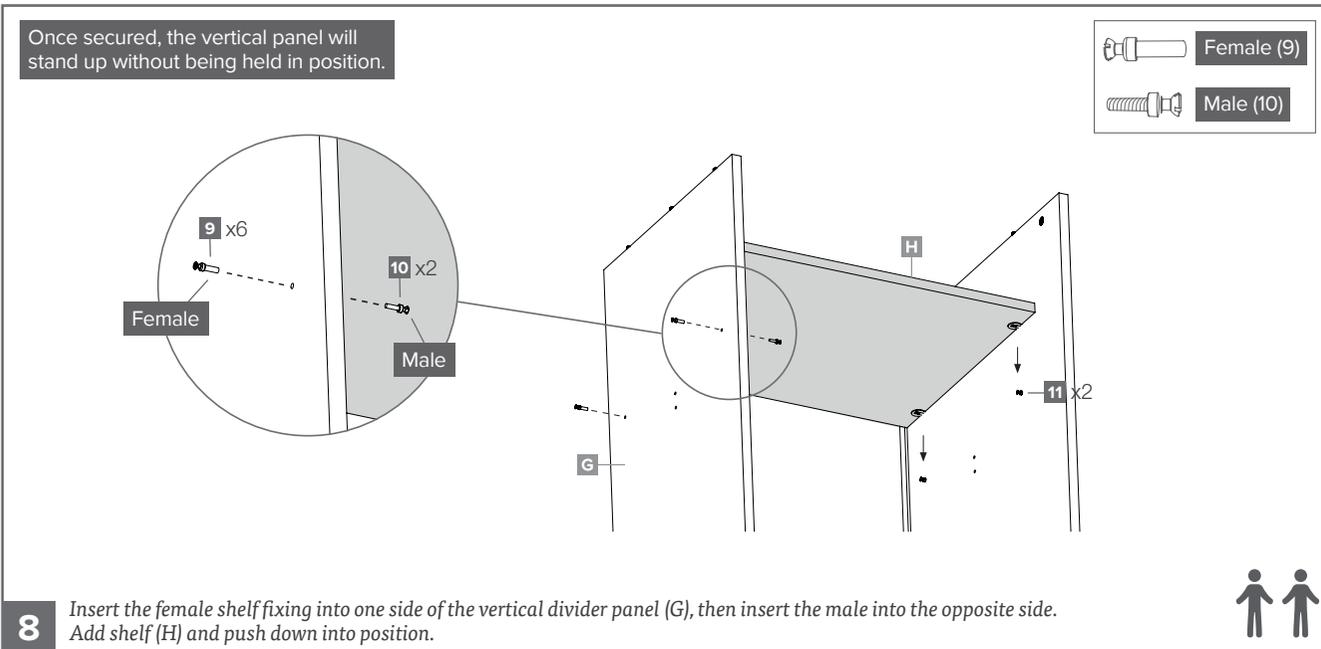


8 Insert the female shelf fixing into one side of the vertical divider panel (G), then insert the male into the opposite side. Add shelf (H) and push down into position.

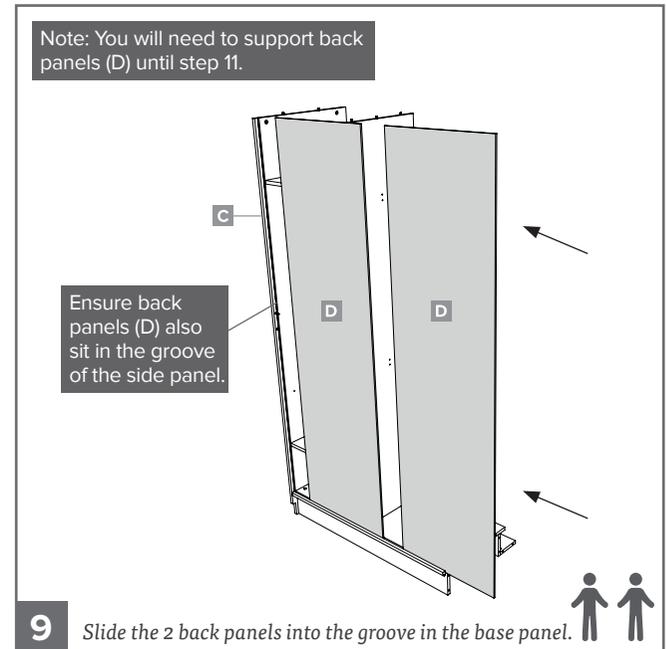


9 Slide the 2 back panels into the groove in the base panel.

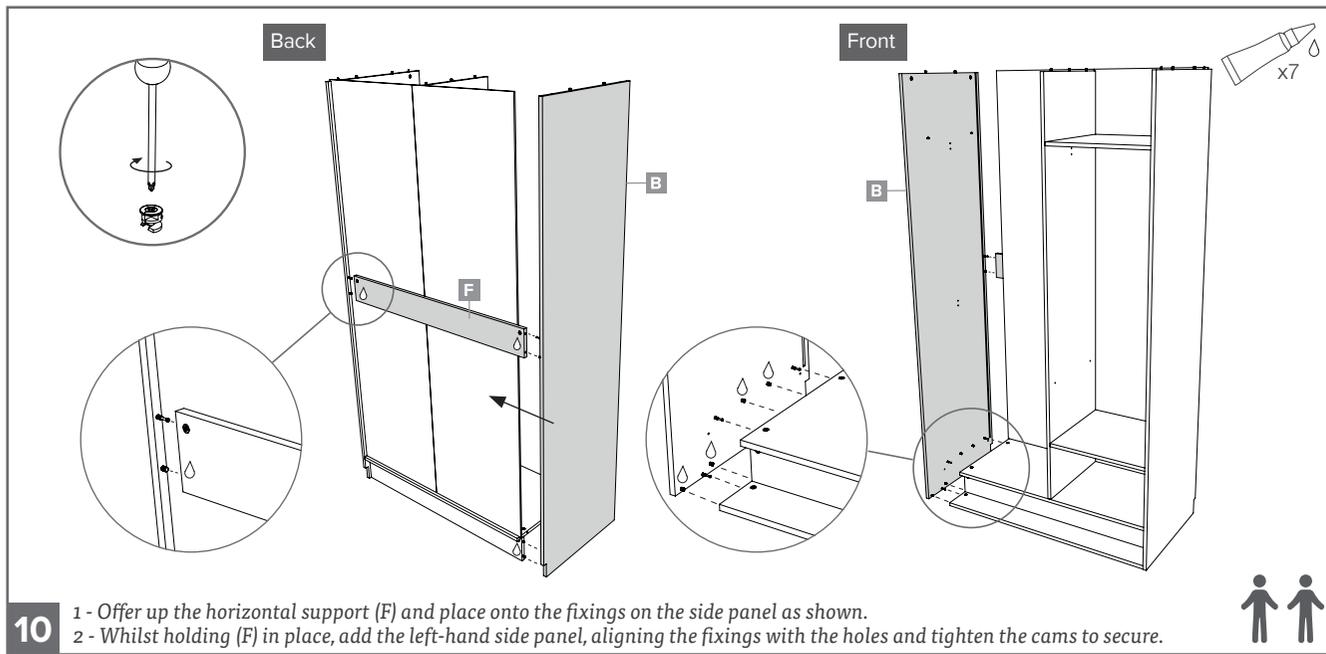


10 1 - Offer up the horizontal support (F) and place onto the fixings on the side panel as shown.
 2 - Whilst holding (F) in place, add the left-hand side panel, aligning the fixings with the holes and tighten the cams to secure.

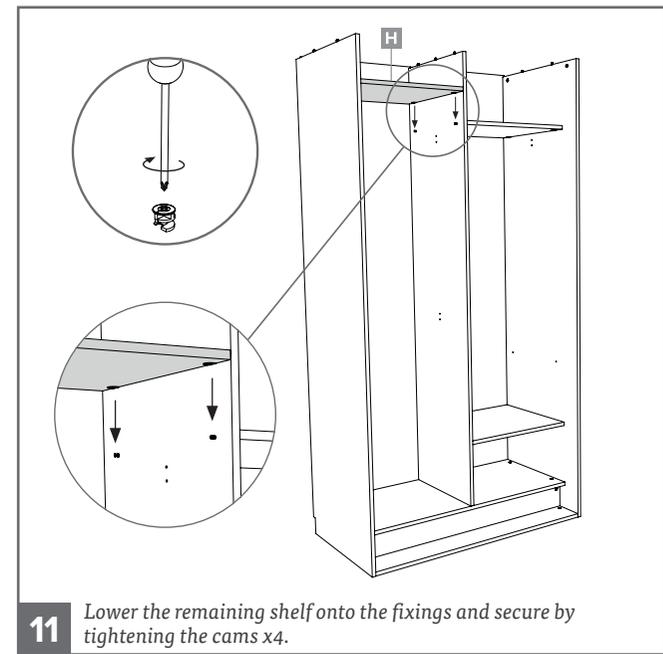


11 Lower the remaining shelf onto the fixings and secure by tightening the cams x4.

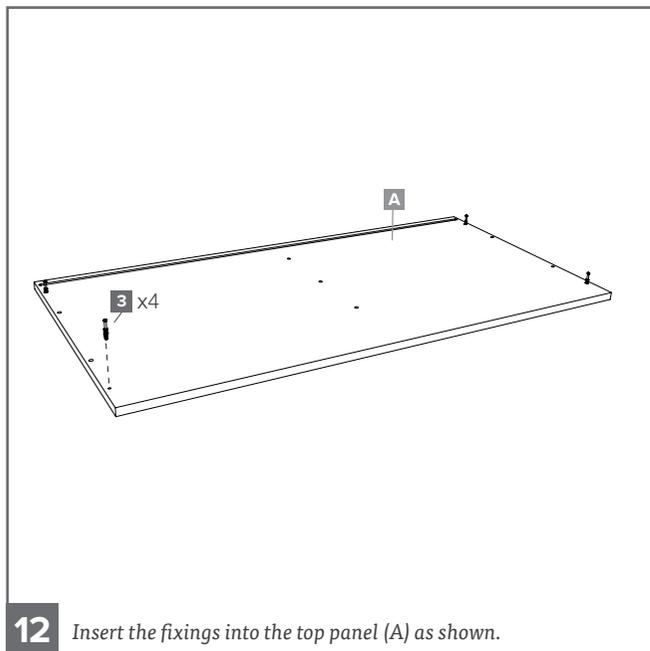


12 Insert the fixings into the top panel (A) as shown.

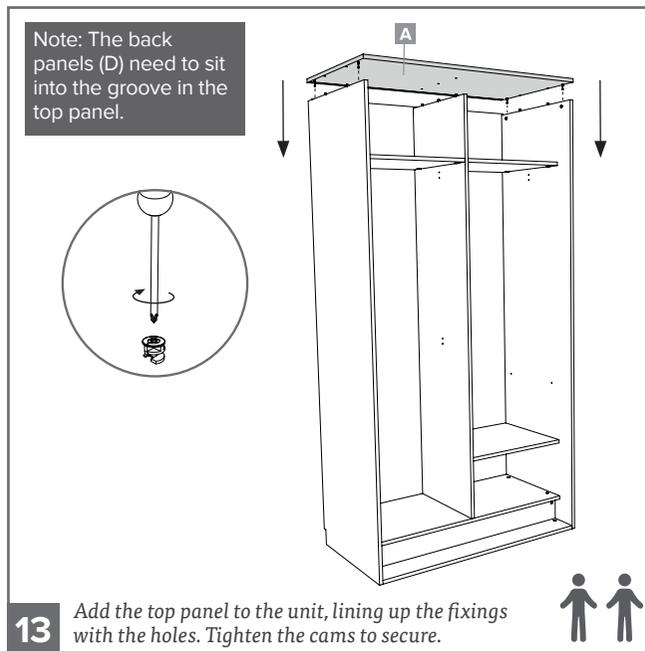


13 Add the top panel to the unit, lining up the fixings with the holes. Tighten the cams to secure.

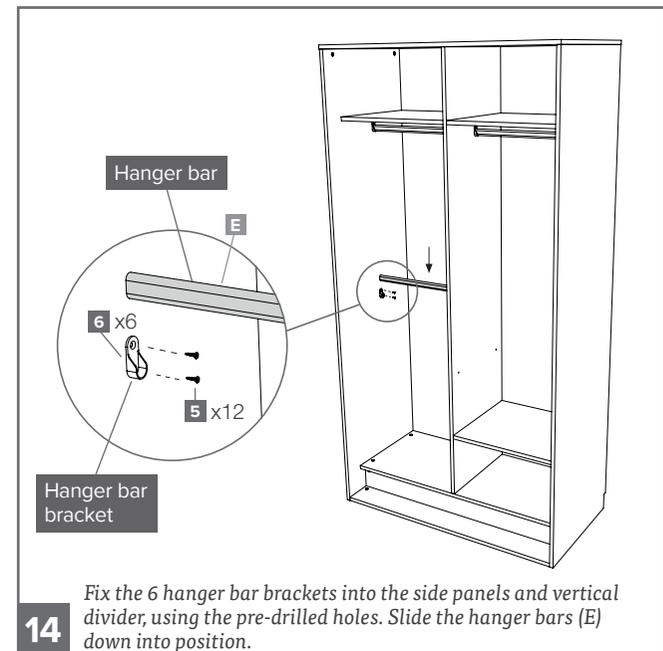


14 Fix the 6 hanger bar brackets into the side panels and vertical divider, using the pre-drilled holes. Slide the hanger bars (E) down into position.

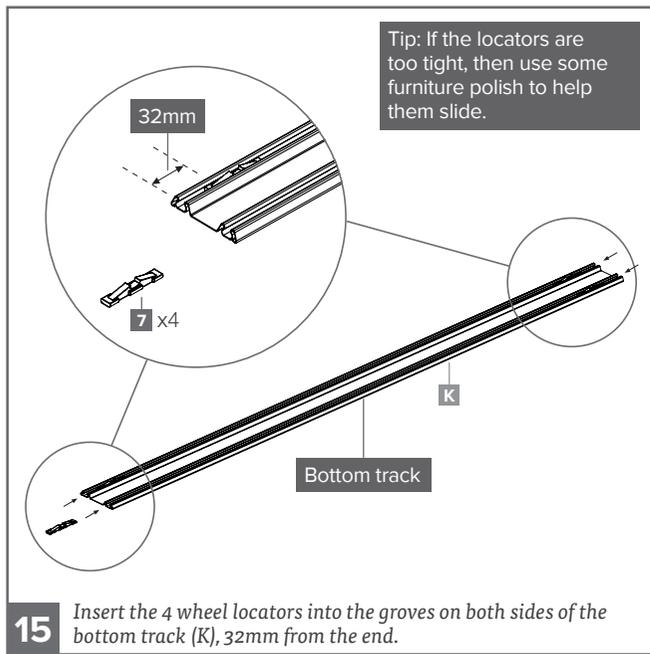

15 Insert the 4 wheel locators into the grooves on both sides of the bottom track (K), 32mm from the end.

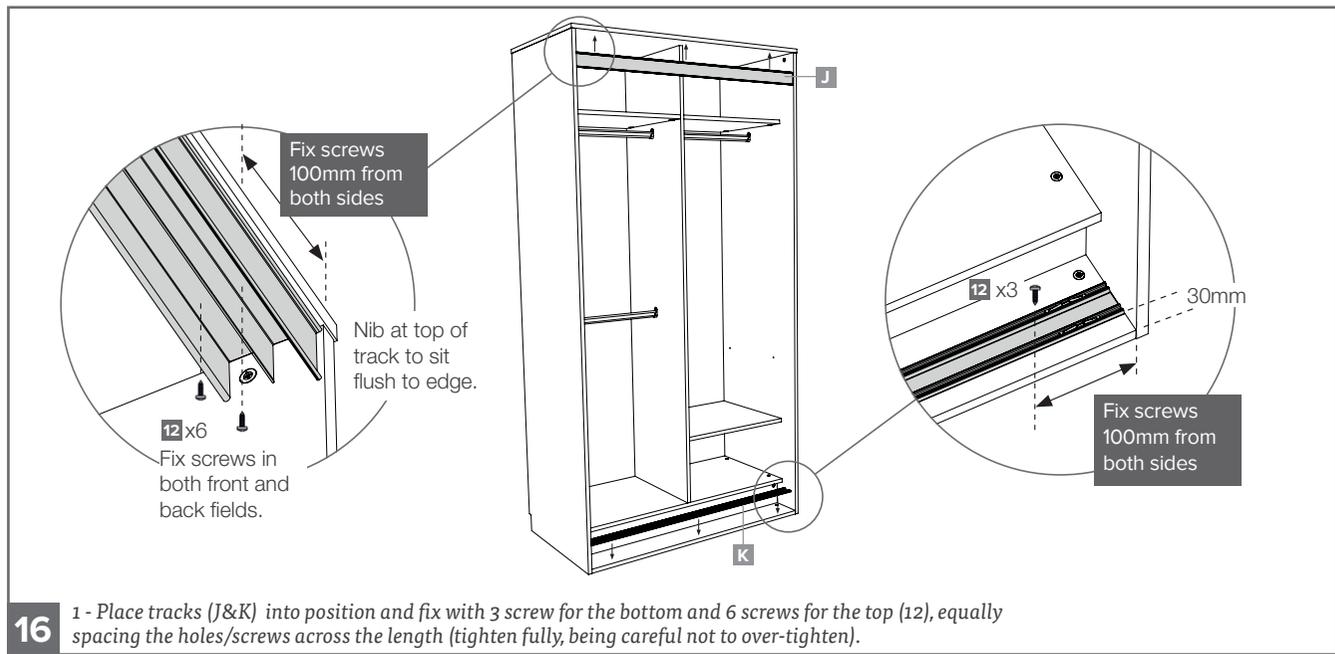

16 1 - Place tracks (J&K) into position and fix with 3 screw for the bottom and 6 screws for the top (12), equally spacing the holes/screws across the length (tighten fully, being careful not to over-tighten).

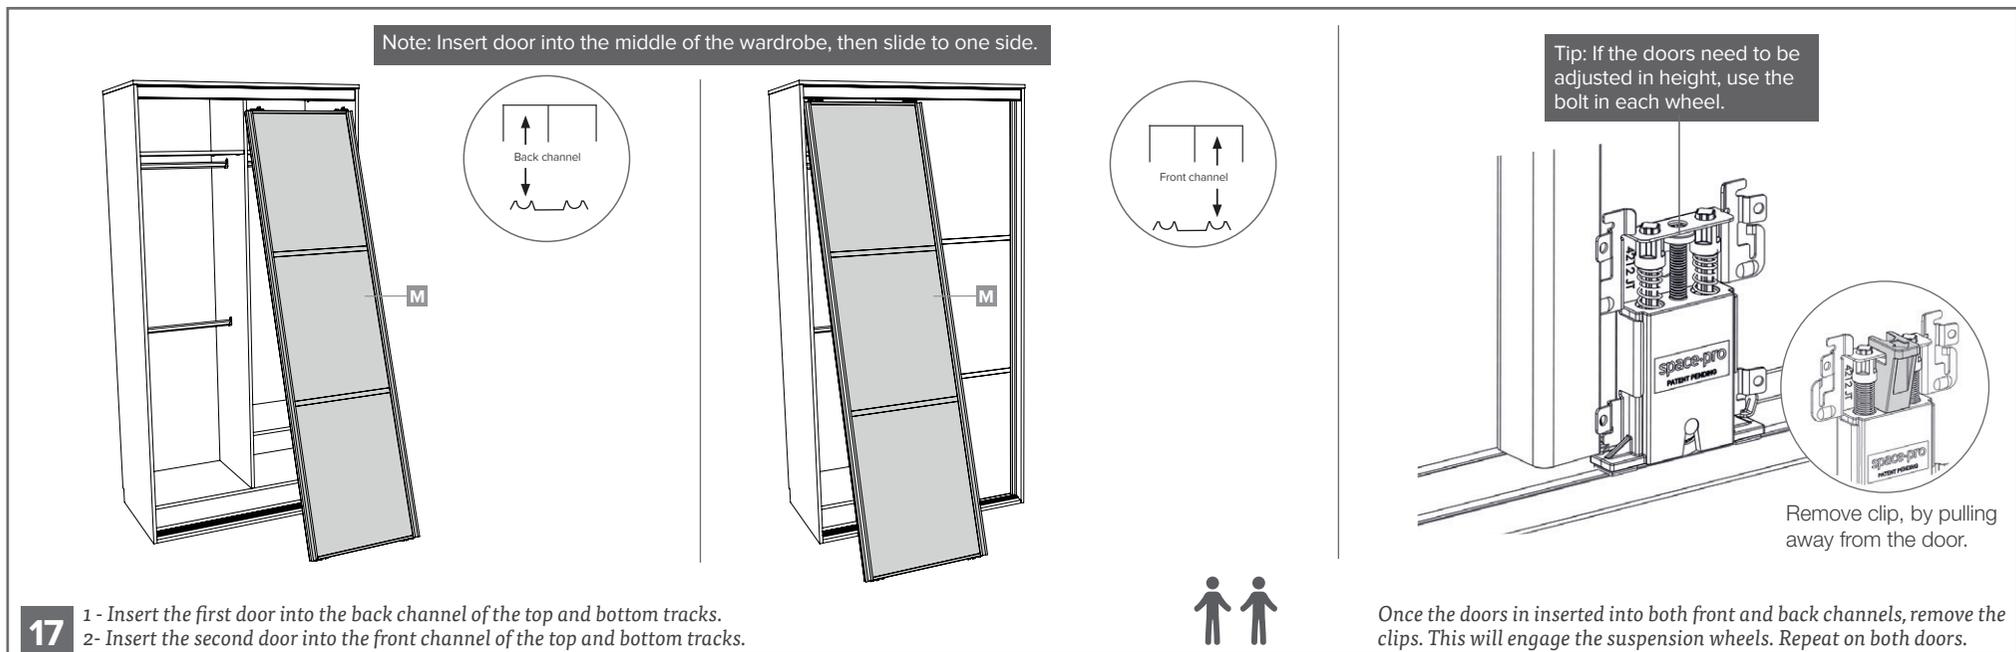

17 1 - Insert the first door into the back channel of the top and bottom tracks.
2 - Insert the second door into the front channel of the top and bottom tracks.