










21X28.5CM

HOMEBASE

15KG ROUND PARASOL BASE - Assembly Instructions

COMPONENTS

A	Parasol base	
B	Connected bolt	
C	Plastic nut	
D	Supports decorated ring	
E	Base support	
F	Nut	
G	Locking bolt	
H	Support upper casing	
I	Mat	

ASSEMBLY

Step 1: Fasten the plastic nut (C) clockwise to the connected bolt (B), let the bolt stick out 15~20mm.



Step 2: Place the iron mat (I) to the connected bolt (B), then also place the supports decorated ring (D) to the connected bolt (B).

Step 3: Attach the stand support (E) to the top of the bolt (B), make sure it secures the bolt.

Step 4: Fasten the locking bolt (G) to the small nut (F), then take the whole parasol base out.

Step 5: There are three support upper casings (H) on the top of the stand support, select them according to your need.

Note: To prevent the support from eroding, don't use acids to clean it.

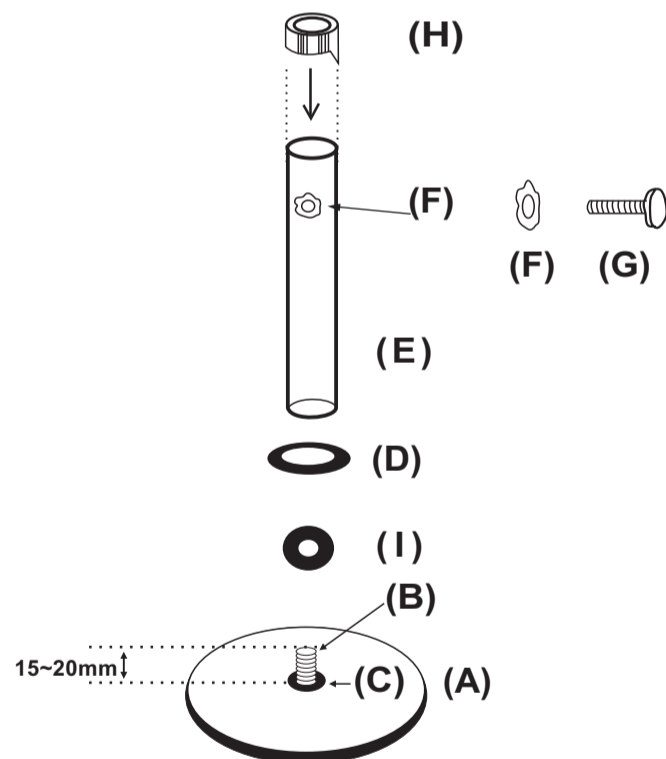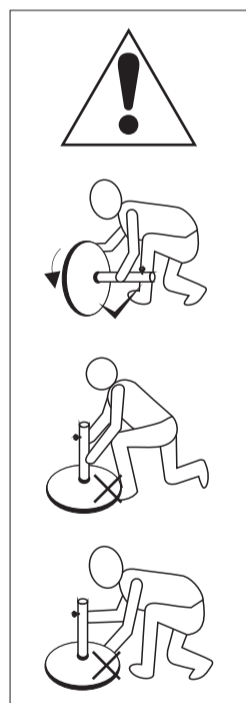

INSTRUCTION MANUAL

Important! Please read these instructions before using the product. Retain instructions for future use.
HHGL Limited, MK9 1BA; HHGL (ROI) Limited, D02 X576