

HOMEBASE

ERIK SLATTED SHOE STORE

INSTRUCTION MANUAL



IMPORTANT: Please read these instructions before using the product and retain for future use.

HHGL Limited, MK9 1BA
HHGL (ROI) Limited, D02 X576



V2_2024

WARNING


- This product should be permanently anchored to the wall or other suitable surface to avoid serious injury or death.
- To help avoid any serious injury or death, this product includes a bracket to prevent toppling.
- We strongly recommend that this product be permanently fixed to the wall or other suitable surface.
- Fixing hardware is not included since different surface materials require different attachments.
- Please seek professional advice if you are in doubt what fixing hardware to use.
- Regularly check your fixing device.

PARTS LIST

Please check you have all the components and fittings listed. If you find any missing or damaged parts, please contact our customer services team on 0333 003 7084 between 09:00 & 18:00, or use the contact form on our website www.homebase.co.uk


(A)  MALE CAMLOCK X 4	(B)  FEMALE CAMLOCK X 4	(C)  BASE PAD X 4	(D)  12MM SCREW X 48
(E)  60MM SCREW X 4	(F)  ALLEN KEY X 1	(G)  14MM SCREW X 1	(H)  METAL BRACKET X 1
(I)  35MM SCREW X 1	(J)  WALL PLUG X 1	(K)  WALL PLUG X 1	(L)  CORNER INSERT X 10
(M)  14MM SCREW X 10	(N)  DOOR STOPPER X 6	(O)  NUT INSERT X 6	(P)  LEFT MECHANISM X 3
(Q)  RIGHT MECHANISM X 3	(R)  COVER STICKERS X 4		

PANELS:

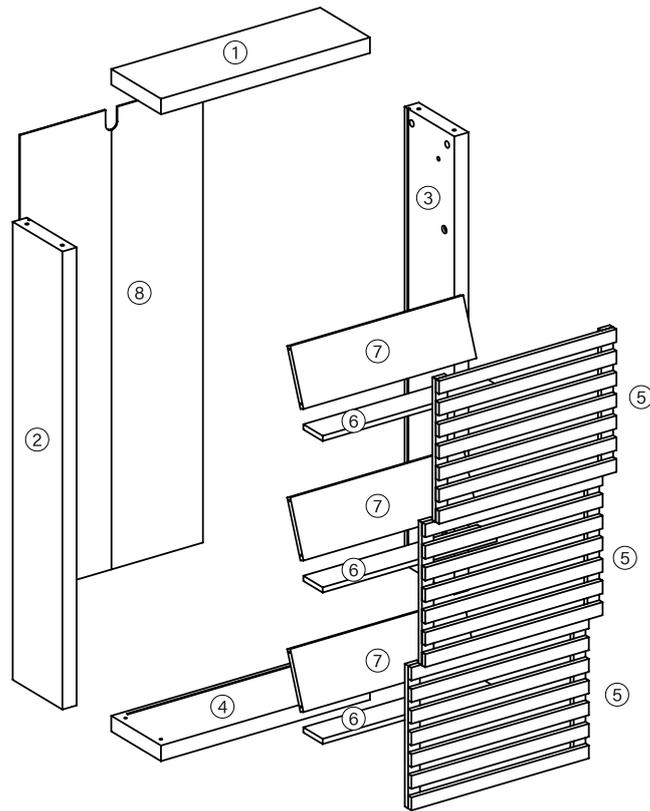


STEP 1

1. Insert 4 x male camlocks (A) into the top panel (1).
2. Attach the metal bracket (H) using a 14mm screw (G) to the top panel.
3. Insert 3 x door stoppers (N) into each side panel (2 & 3).

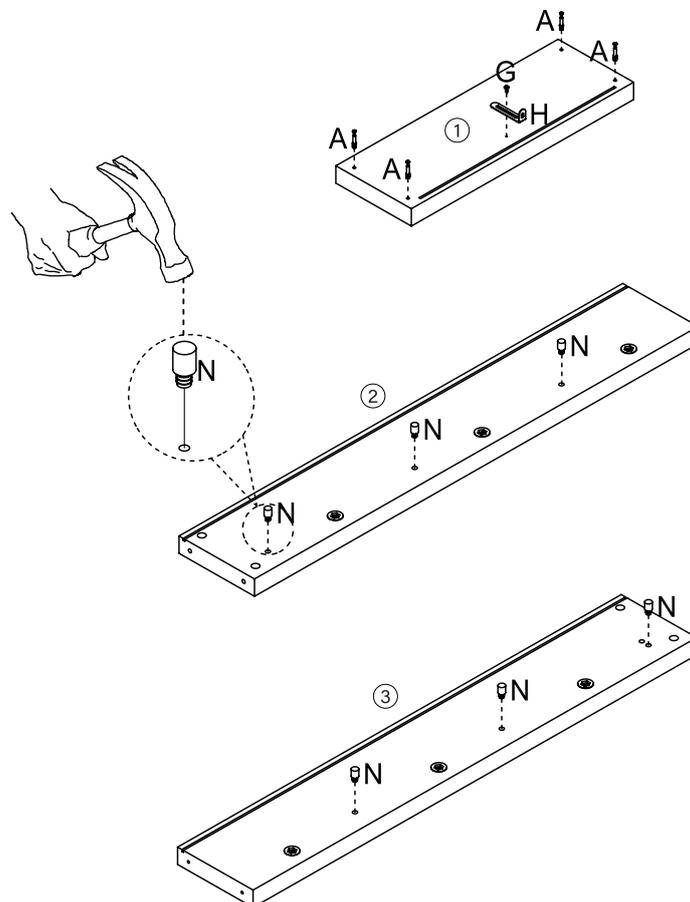


STEP 2

Secure the side panels (2 & 3) to the top panel (1) using 4 x male and female camlocks (A & B). Ensure the slots on the side panels align with the slot on the top panel.

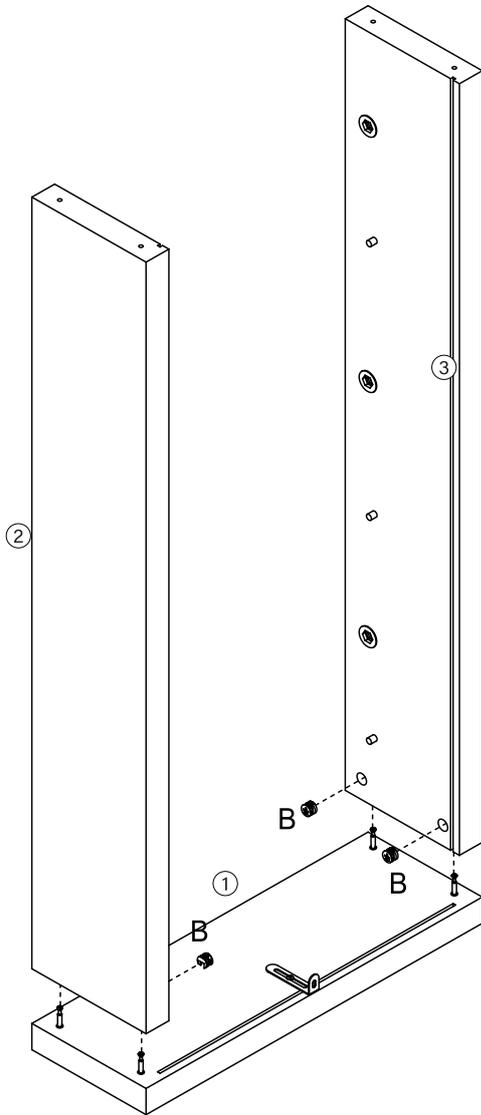


STEP 3

Insert the back panel (8) into the slots on the side and top panels.

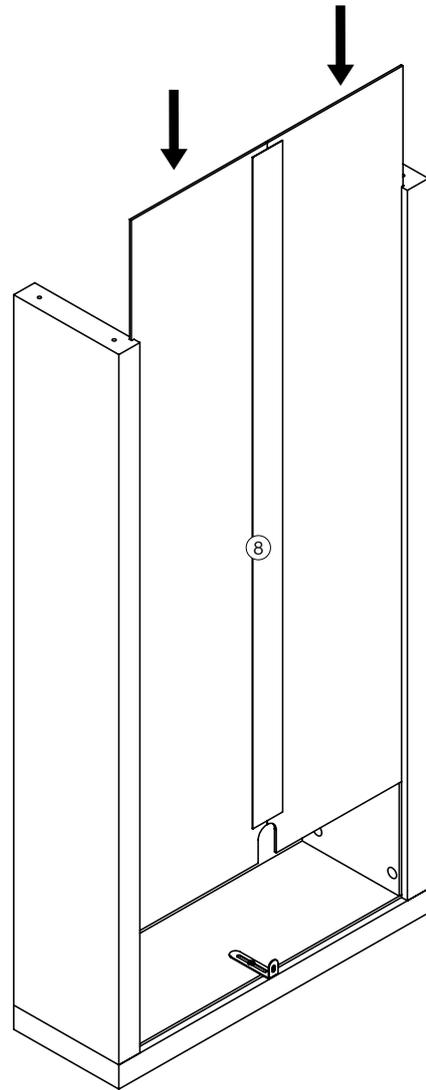


STEP 4

Attach the bottom panel (4) to the side panels using 4 x 60mm screws (E). Ensure that the slot in the bottom panel aligns with the top of the back panel (8).

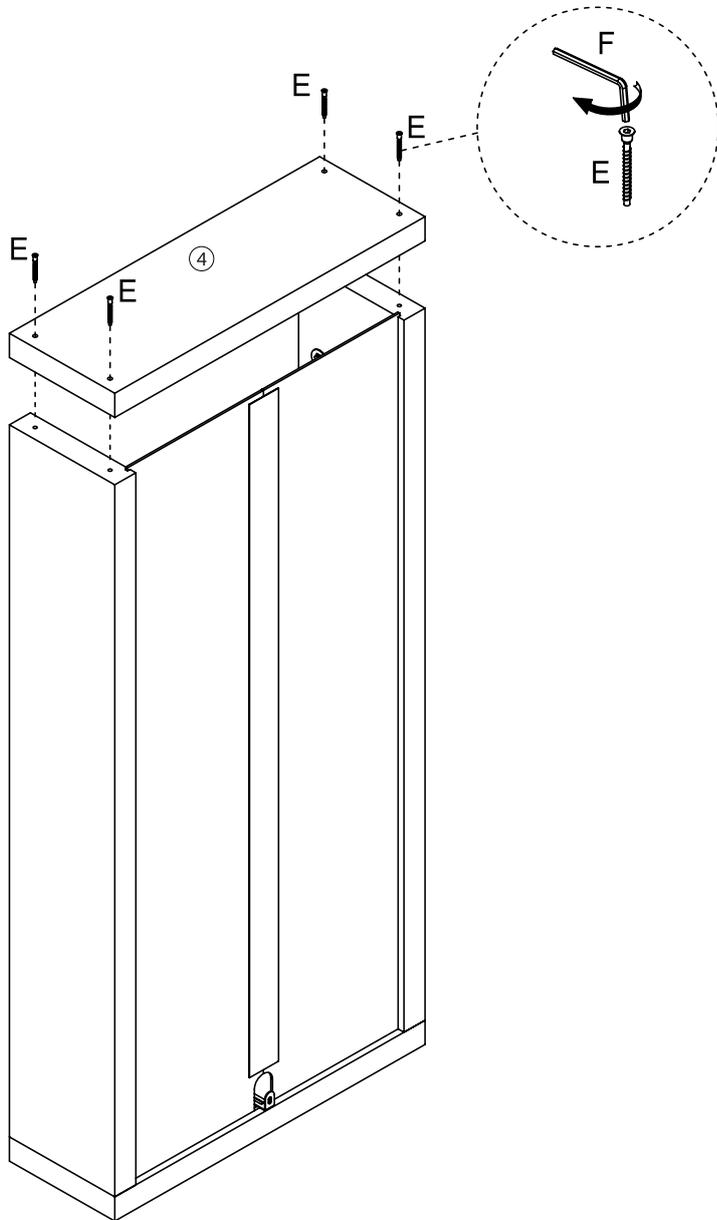


STEP 5

Add 4 x base pads (C) to the corners of the bottom panel (4).

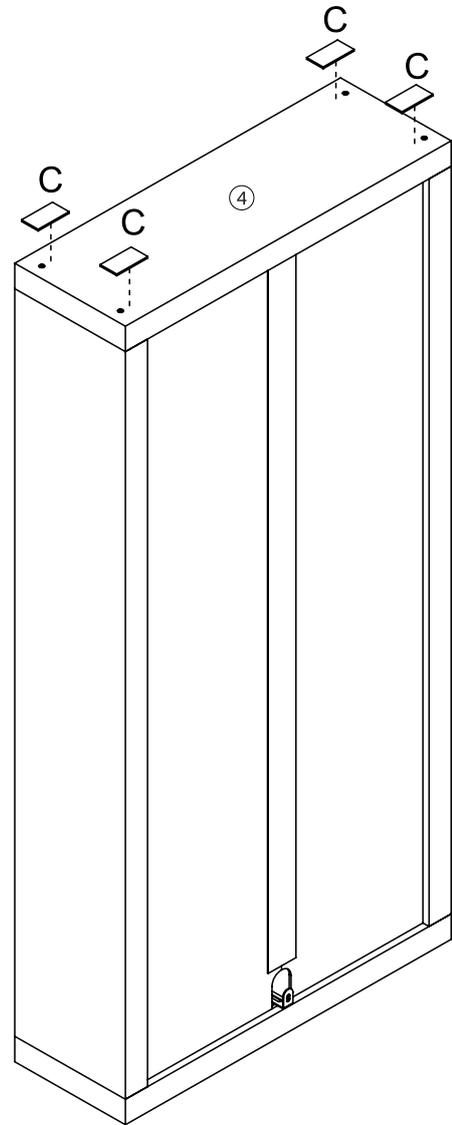


STEP 6

Secure the left and right plastic mechanism (P & Q) to each of the 3 door panels (5) using 3 x 12mm screws (D) for each mechanism.

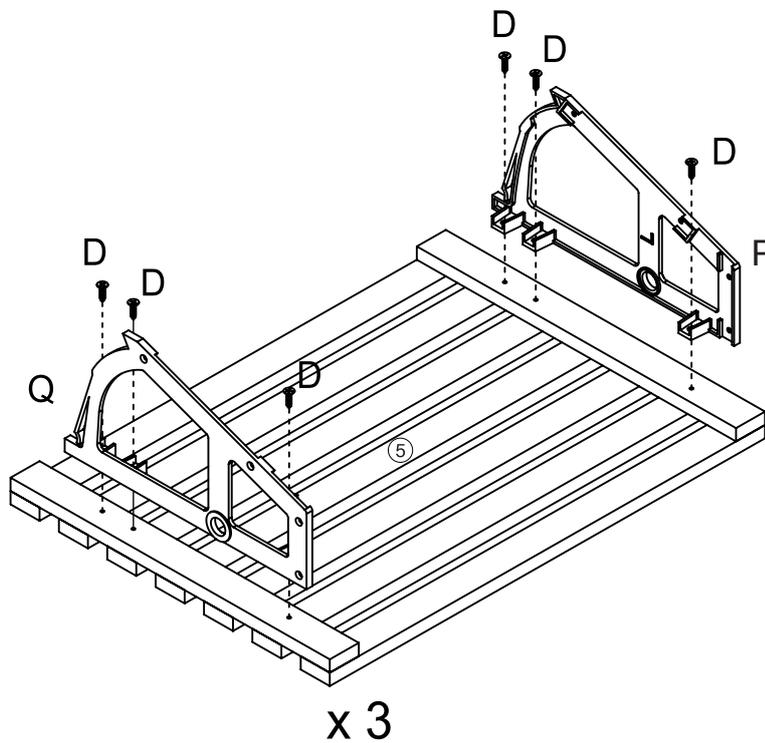


STEP 7

Attach the back and bottom drawer panels (6 & 7) to the plastic mechanisms using 4 x 12mm screws on each side.

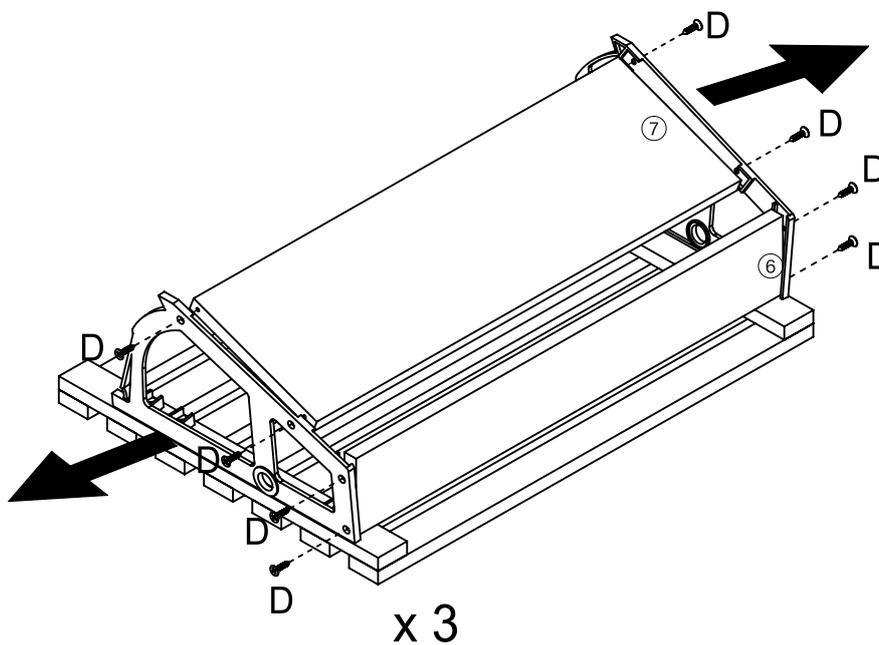


STEP 8

1. Cover internal screw holes with 4 x cover stickers (R),
2. Insert the bottom drawer into the unit and secure with 2 x 12mm screws (D) in nut inserts (O),
3. Repeat for the middle and top drawer.

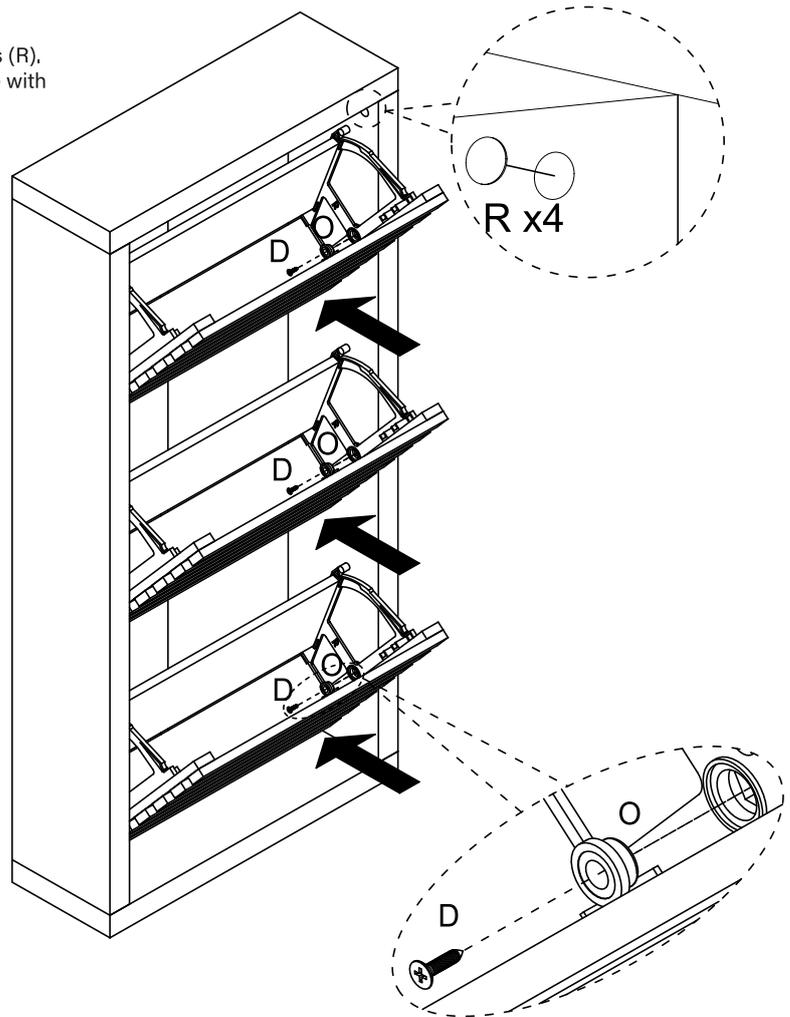


STEP 9

Secure the back panel to the bottom, top and side panels by placing 10 x corner inserts (L) evenly along the corners and securing with 14mm screws (M).

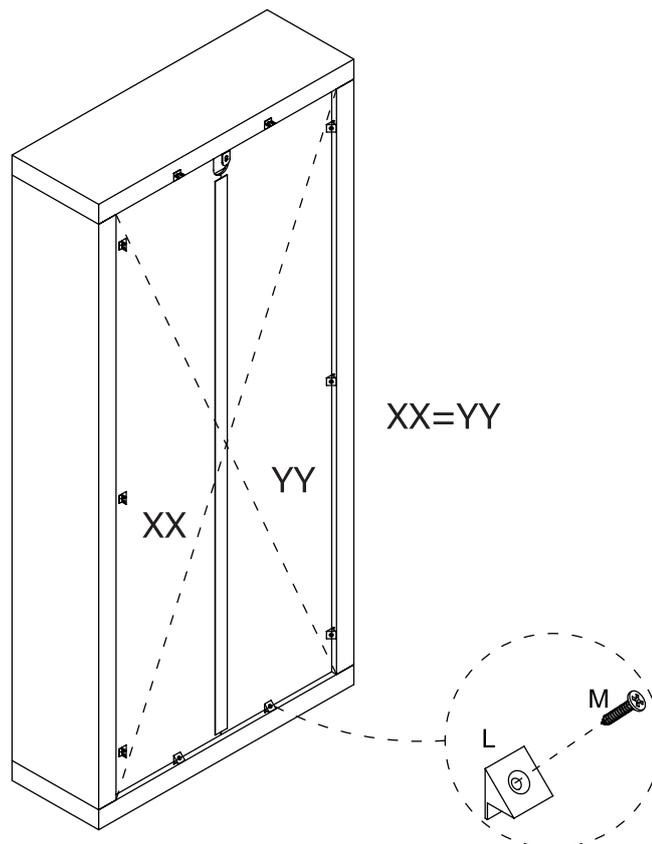

STEP 10

1. Mark the bracket hole on the wall using a pencil
2. Using a 5mm drill bit, drill a hole in the wall using your marking in step 10.1.
3. Insert relevant wall plug (J or K) depending on surface.
4. Secure your unit to the wall using a 35mm screw (I).

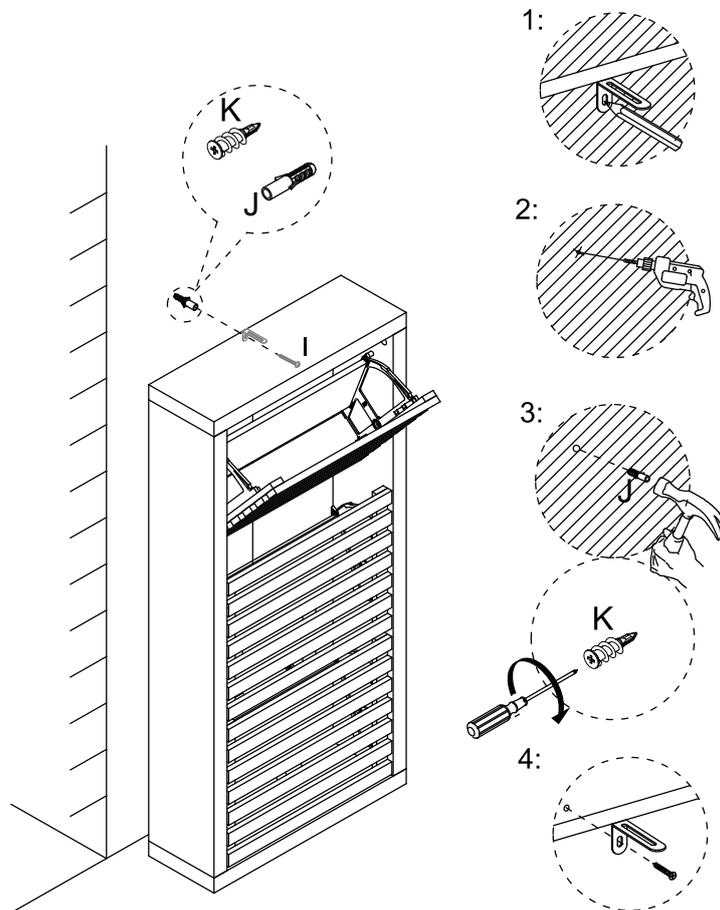

ASSEMBLY COMPLETE