

5 DRAWER  
UNIT MANGO  
OAK EFFECT

**HOMEBASE**  
**EDIT**

## INSTRUCTION MANUAL

IMPORTANT: Please read these instructions before  
using the product and retain for future use.

HHGL Limited, MK9 1BA,  
HHGL (ROI) Limited, D02 X576


















# SAFETY AND CARE ADVICE

THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL OR OTHER SUITABLE SURFACE TO AVOID DAMAGE OR SERIOUS INJURY.

To help avoid any damage or serious injury, this product includes a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing hardware is not included since different surface materials require different attachments. Please seek professional advice if you are in doubt about which fixing hardware to use. Regularly check your wall strap is securely fixed to the wall or other suitable surface. If fixings become loose, please re-tighten.

## PARTS LIST

### HARDWARE

					
Male camlocks (A) x 40	Female camlocks (B) x 40	Dowels (C) x44	Screws (D) x 4	Allen key (E) x 1	Screw (F) x 1
					
Plasterboard wall plug (G) x 1	Masonry wall plug (H) x 1	Screw (I) x 1	Wall bracket (J) x 1	Screws (K) x 12	Drawer stops (L) x 5
					
Screws (M) x 5	Cover stickers (N) x 4	Corner bracket (O) x 10	Screws (P) x 10	Screws (Q) x 20	

### ELEMENTS

Top panel (1) x 1

Unit frame (2) x 2

Left side panel (3) x 1

Right side panel (4) x 1

Shelf panels (5) x 4

Support panels (6) x 5

Bottom panel (7) x 1

Back panel (8) x 1


Drawer front panel (9) x 5

Drawer left side panel (10) x 5

Drawer right side panel (11) x 5

Drawer back panel (12) x 5


Drawer base panel (13) x 5

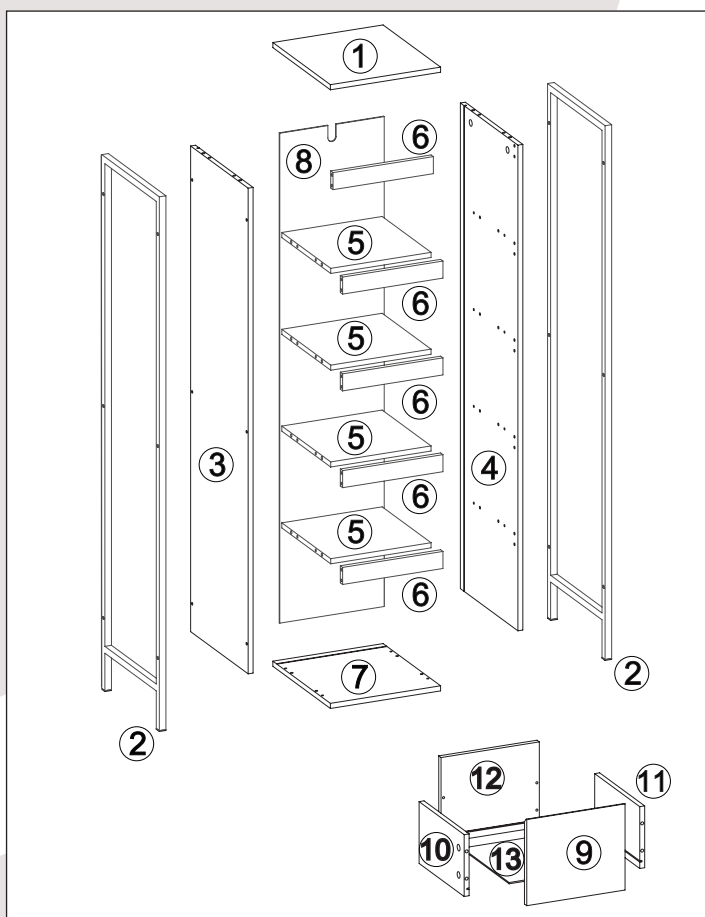

# ASSEMBLY


## STEP 1

1. Screw 20 x male camlocks (A) into panels (1, 3 & 4).
2. Attach wall bracket (J) to top panel (1) using screw (I).
3. Attach 5 x drawer stops (L) to panels (1 & 5) using 5 x screws (M).

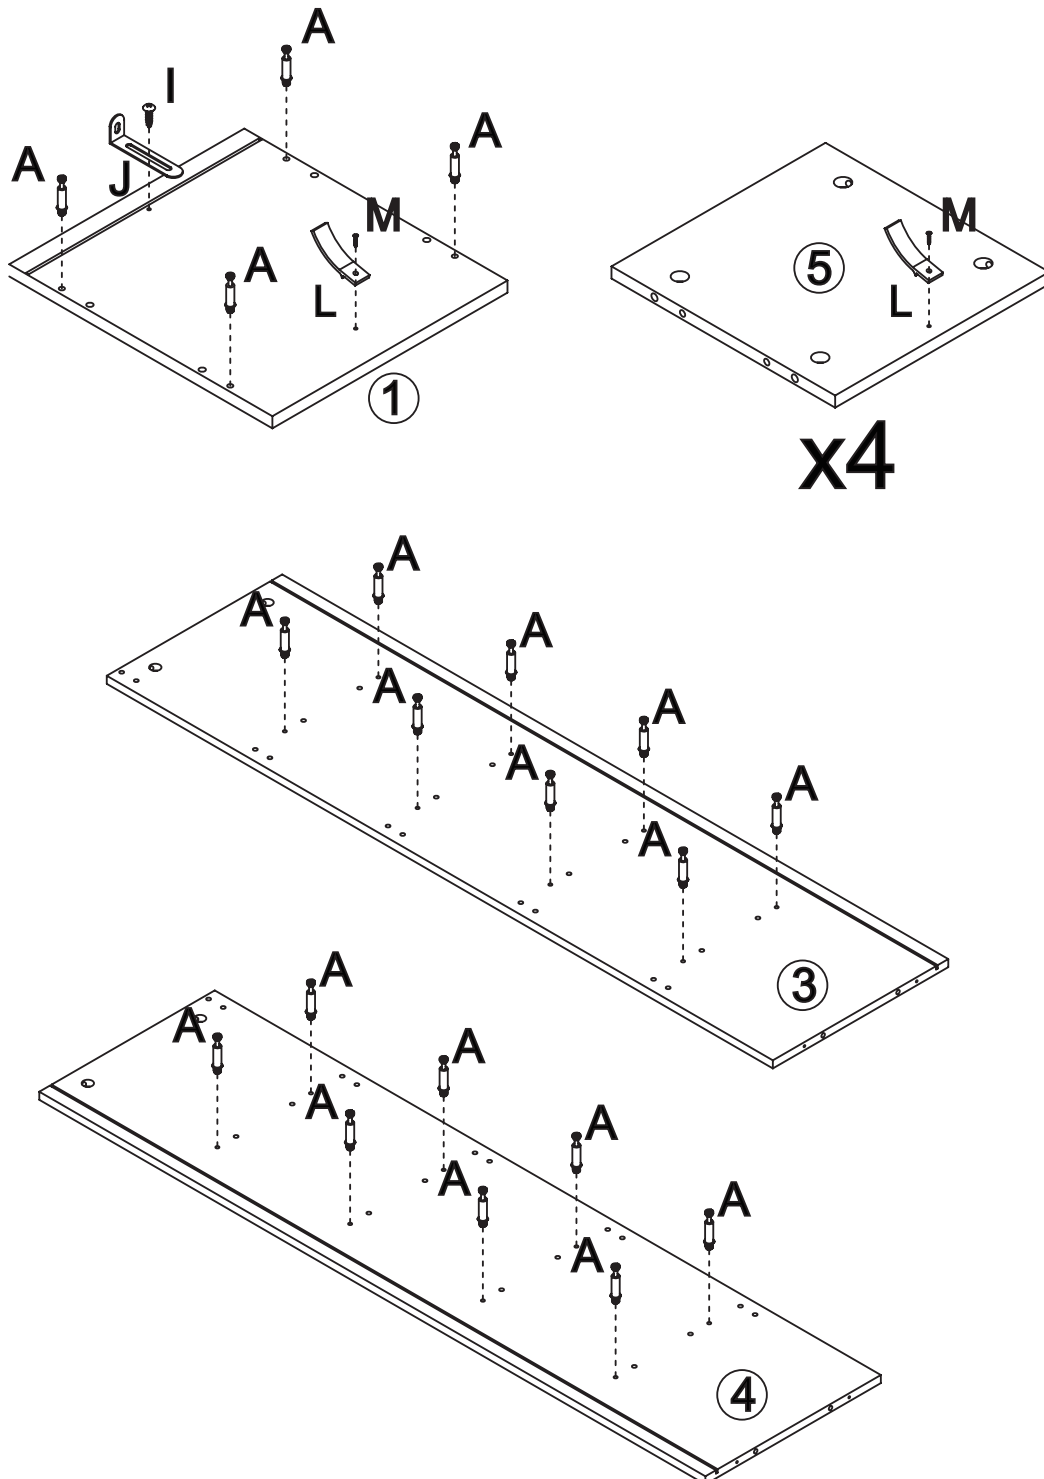


## STEP 2

Connect 4 x shelves (5) and 5 x support panels (6) to left panel (3) using 18 x wooden dowels (C).  
Secure the shelves with 8 x female camlocks (B).

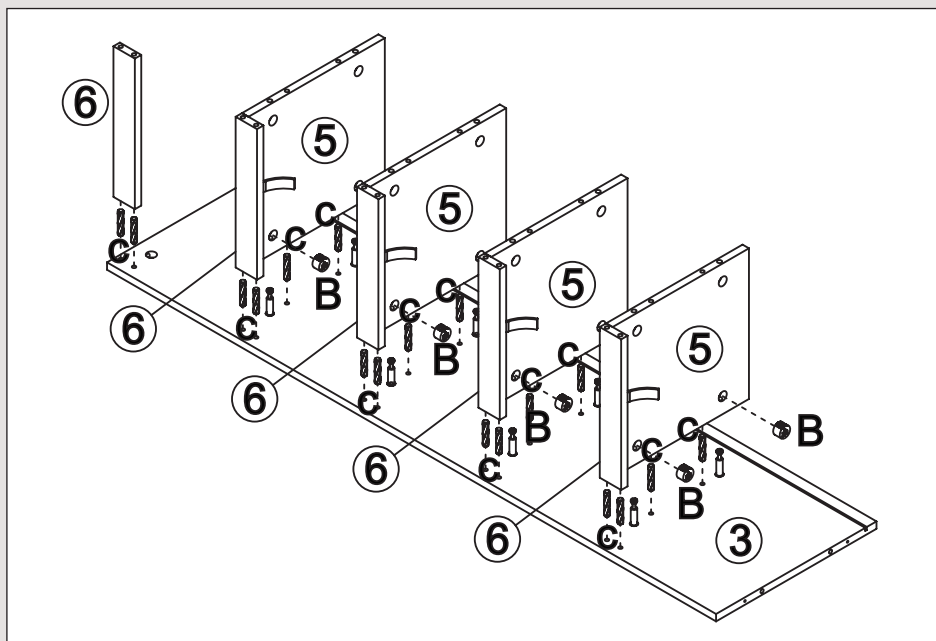


## STEP 3

Connect the partially assembled unit to right panel (4) using 18 x wooden dowels (C).  
Secure the shelves with 8 x female camlocks (B).

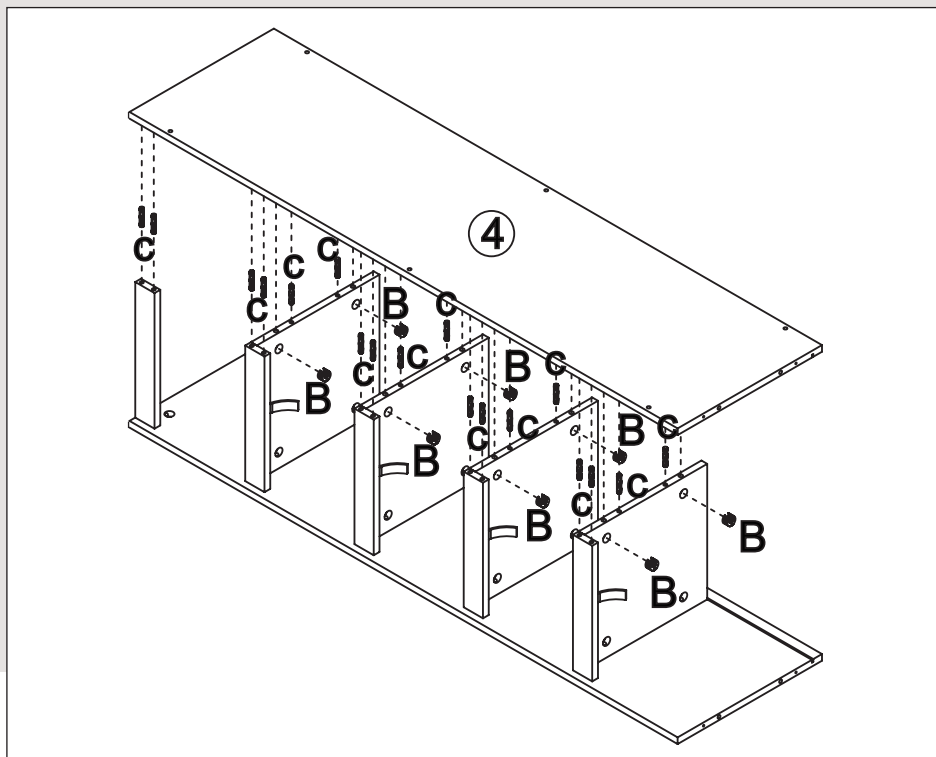


## STEP 4

Attach bottom panel (7) to the partially assembled unit using 4 x wooden dowels (C).  
Secure with 4 x screws (D).

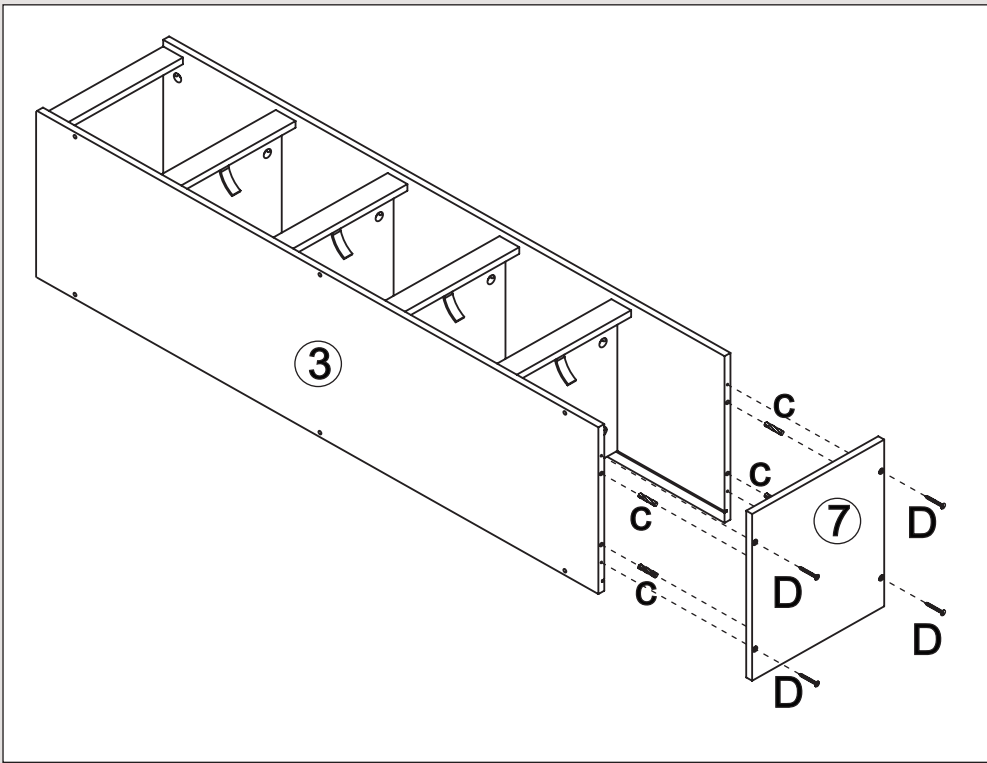


## STEP 5

Slide back panel (8) into the slots of the partially assembled unit.

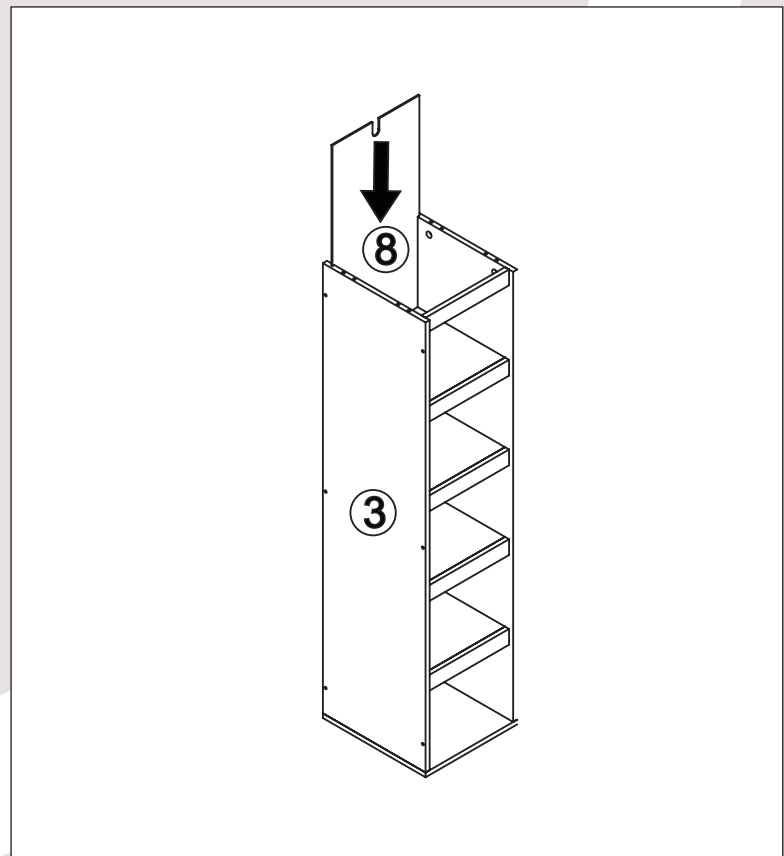


## STEP 6

Attach top panel (1) to the partially assembled unit using 4 x wooden dowels (C). Secure with 4 x female camlocks (B).

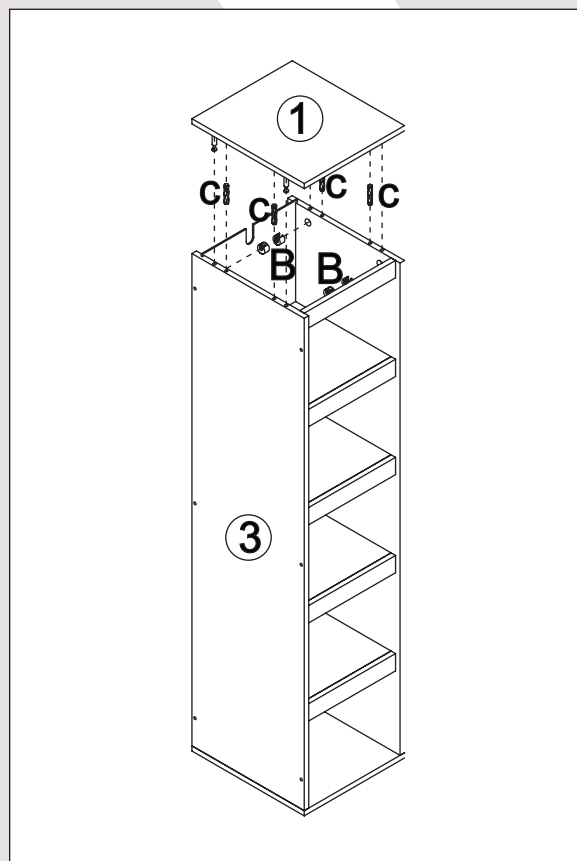


## STEP 7

Attach frame (2) to the left side of the unit using 6 x screws (K).

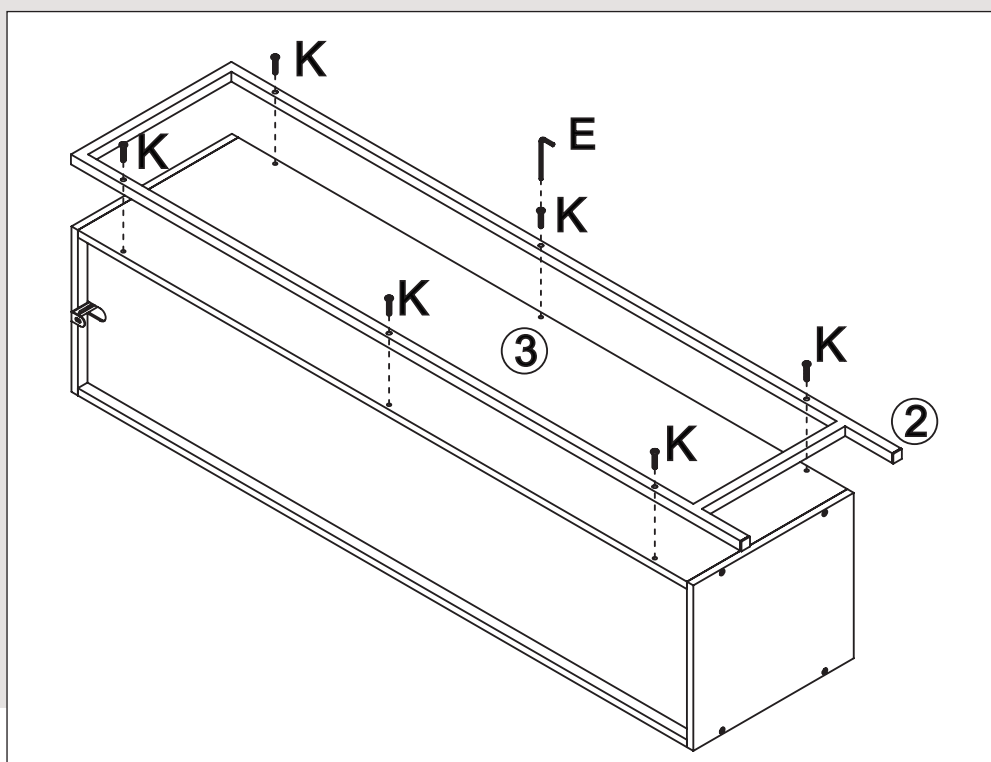


## STEP 8

Attach frame (2) to the right side of the unit using 6 x screws (K). Cover screw holes with 4 x cover stickers (N).

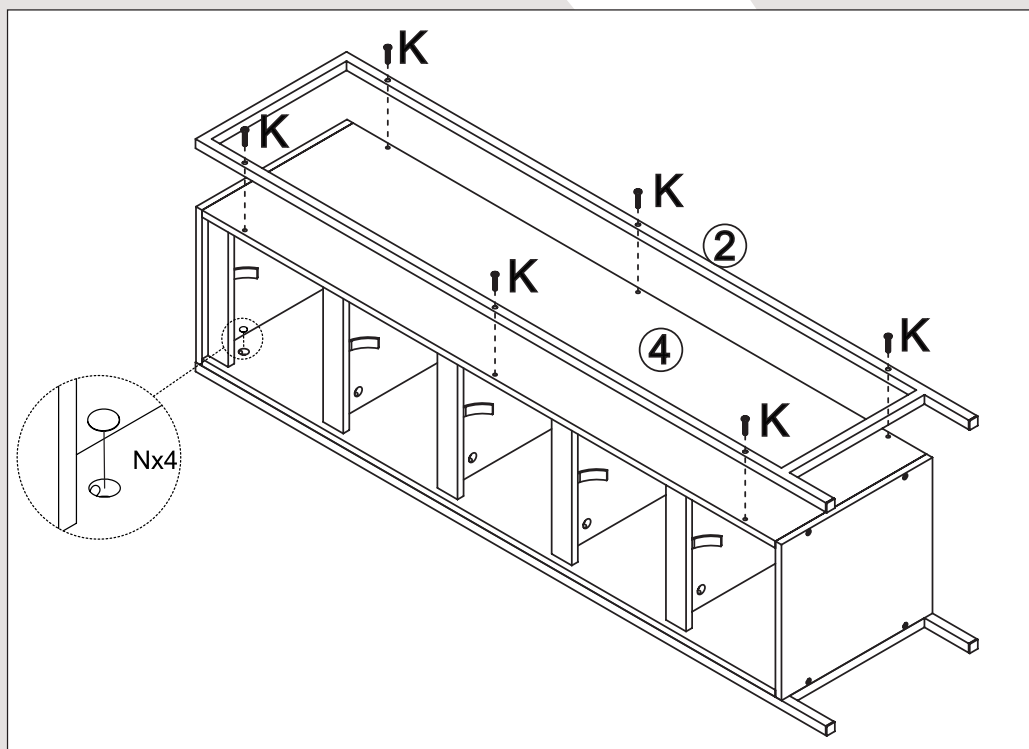


## STEP 9

1. Ensure your unit is square by measuring from corner to corner. Measurement XX should be equal to measurement YY.
2. Secure the back panel by placing 10 x corner brackets (O) on the back of the unit and securing with 10 x screws (P).

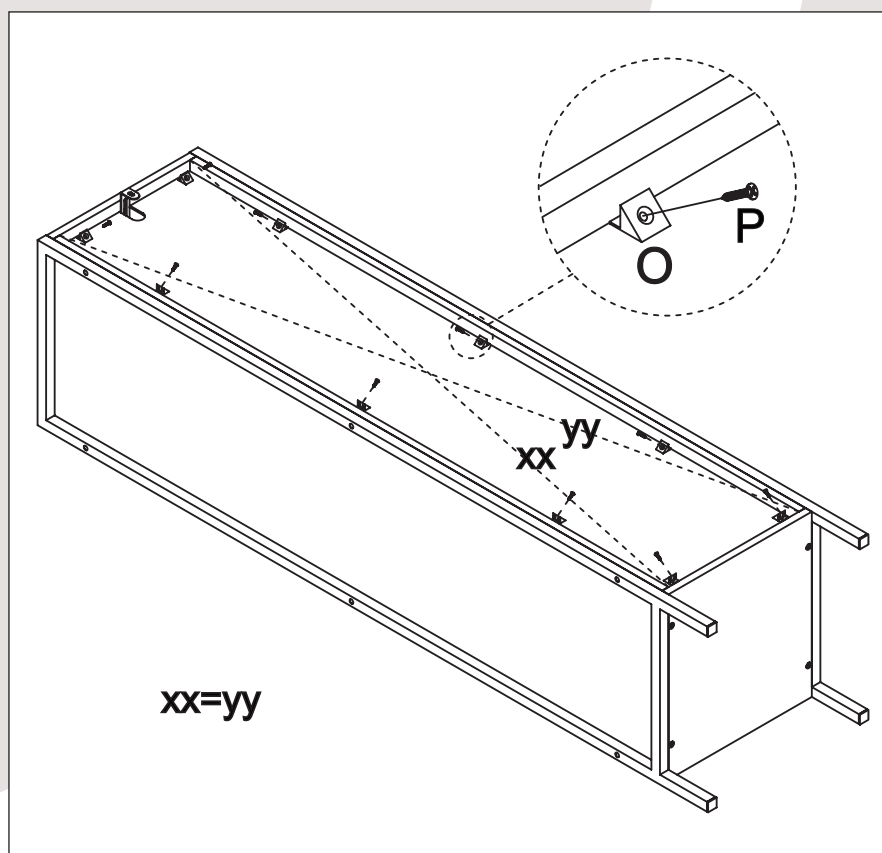


## STEP 10

1. Screw 4 x male camlocks (A) into front drawer panel (9).
2. Attach side drawer panels (10 & 11) to front drawer panel (9) using 4 x female camlocks (B).
3. Slide the drawer base panel into the slots of the partially assembled drawer.
4. Attach drawer back panel (12) to the partially assembled drawer using 4 x screws (Q).
5. Repeat for the 4 x remaining drawers.

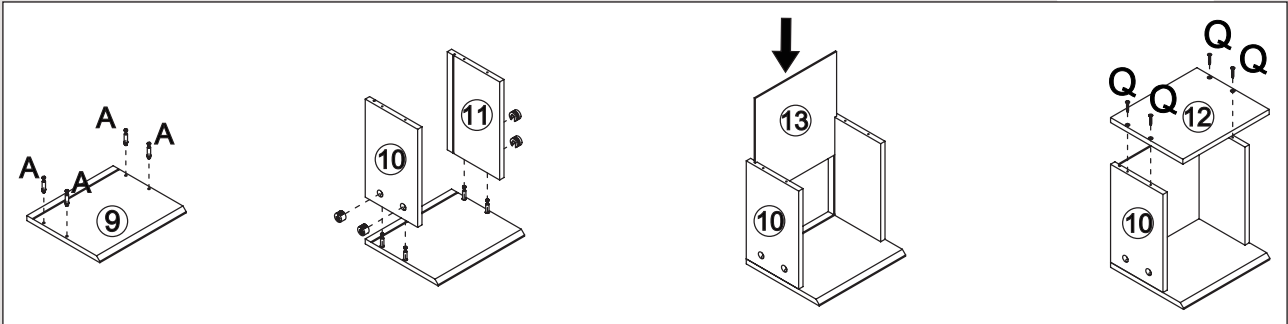

## STEP 11

1. Mark a bracket hole onto the wall using a pencil.
2. Using a 5mm drill bit, drill a hole in the wall using your marking in step 11.1.
3. Insert the plasterboard (G) or masonry plug (H) depending on your wall surface.
4. Secure your unit to the wall using screw (F).

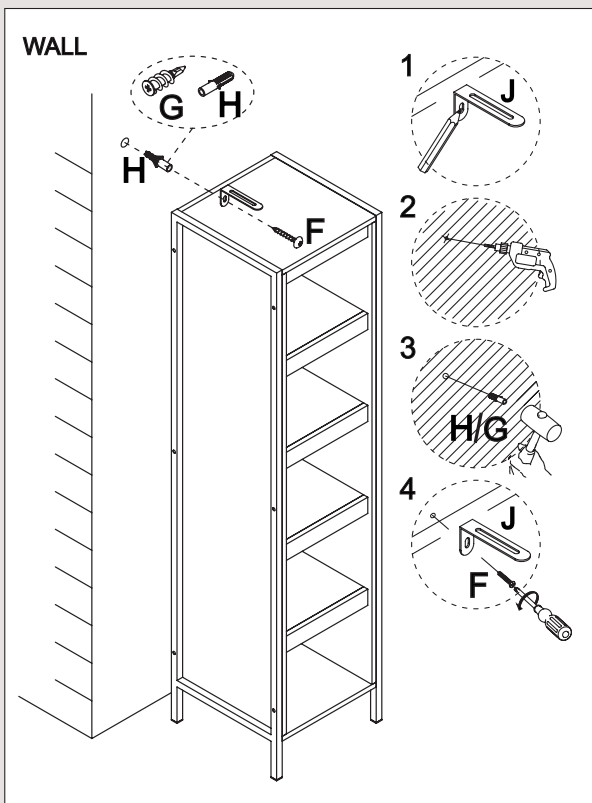

## STEP 12

Insert drawers into the assembled unit.

